

## User manual

# ADA-13021

## ETHERNET to Current Loop converter



## Contents

1. GENERAL INFORMATION.....	4
1.1. WARRANTED INFORMATION.....	4
1.2. GENERAL CONDITIONS FOR SAFE USE.....	4
1.3. CE LABEL.....	4
1.4. ENVIRONMENTAL PRESERVATION.....	4
1.5. SERVICE AND MAINTENANCE.....	4
1.6. PACK CONTENTS.....	4
2. PRODUCT INFORMATION.....	4
2.1. PROPERTIES.....	4
2.2. DESCRIPTION.....	5
2.3. ETHERNET NETWORK COMMUNICATION.....	5
2.3.1. TCP/UDP SOCKED MODE COMMUNICATIONS.....	5
2.3.2. COMMUNICATIONS IN THE VIRTUAL SERIAL PORT MODE (RealPort).....	5
2.3.3. COMMUNICATIONS IN THE SERIAL BRIDGE MODE.....	5
2.3.4. OTHER COMMUNICATION TYPES.....	5
2.4. CURRENT LOOP INTERFACE.....	6
2.4.1. CURRENT LOOP TRANSMITTER.....	6
2.4.2. CURRENT LOOP RECEIVER.....	6
2.5. ISOLATION.....	6
3. INSTALLATION.....	6
3.1. ASSEMBLING.....	7
3.2. ETHERNET NETWORK CONNECTION.....	7
3.2.1. CONNECTING TO NETWORK ADAPTER OF PC.....	7
3.2.2. CONNECTING FOR OPERATING IN REALPORT MODE.....	7
3.2.3. CONNECTION FOR OPERATING IN TCP & UDP SERIAL BRIDGE MODE.....	8
3.3. CONNECTION TO CURRENT LOOP DEVICES.....	10
3.3.1. CONNECTION TO DEVICE WITH PASSIVE TRANSMITTER & PASSIVE RECEIVER.....	10
3.3.2. CONNECTION TO DEVICE WITH ACTIVE TRANSMITTER & ACTIVE RECEIVER.....	10
3.3.3. CONNECTION TO DEVICE WITH ACTIVE TRANSMITTER & PASSIVE RECEIVER.....	11
3.3.4. CONNECTION TO DEVICE WITH PASSIVE TRANSMITTER & ACTIVE RECEIVER.....	11
3.4. POWER SUPPLY CONNECTION.....	11
4. ACTIVATION.....	12
5. CONFIGURATION.....	12
5.1. INITIAL CONFIGURATION USING ADAFINDER SOFTWARE.....	12
5.1.1. ADAFINDER INSTALLATION.....	12
5.1.2. NETWORK SETTING.....	12
5.2. CONFIGURATION AND MANAGEMENT BY THE USE OF INTERNET BROWSER.....	14
5.2.1. NETWORK CONFIGURATION.....	14
5.2.2. SERIAL PORT CONFIGURATION.....	15
5.2.2.1. SERIAL PORT PROFILE CONFIGURATION (OPERATING MODE).....	15
5.2.2.1.1. REALPORT (VIRTUAL PORT ) CONFIGURATION.....	16
5.2.2.1.2. TCP SOCKETS CONFIGURATION.....	16
5.2.2.1.2.1. TCP SERVER & CLIENT CONFIGURATION.....	16
5.2.2.1.2.2. 'ENABLE TCP KEEP-ALIVE' OPTION CONFIGURATION.....	17
5.2.2.1.2.3. SERIAL PORT TRANSMISSION PARAMETERS CONFIGURATION.....	17
5.2.2.1.3. UDP SOCKETS CONFIGURATION.....	17
5.2.2.1.3.1. UDP CLIENT & SERVER CONFIGURATION IN CASE OF MASTER DEVICE.....	17
5.2.2.1.3.2. UDP CLIENT & SERVER CONFIGURATION IN CASE OF SLAVE DEVICE.....	18
5.2.2.1.3.3. SERIAL PORT TRANSMISSION PARAMETERS CONFIGURATION.....	19
5.2.2.1.4. SERIAL BRIDGE PROFILE CONFIGURATION.....	19
5.2.2.1.4.1. SERIAL PORT TRANSMISSION PARAMETERS CONFIGURATION.....	20
5.2.3. SYSTEM SETTINGS.....	20
5.2.4. USERS CONFIGURATION.....	20
5.2.4.1. CHANGING USER MANE AND PASSWORD.....	20
5.2.4.2. ADDING NEW USER WITH LIMITED PERMISSIONS FOR CONFIGURATION OR MANAGEMENT.....	20
5.2.5. MANAGEMENT.....	21
5.2.5.1. SERIAL PORTS MANAGEMENT.....	21
5.2.5.2. CONNECTIONS MANAGEMENT.....	21
5.2.6. ADMINISTRATION.....	21
5.2.6.1. FILE MANAGEMENT.....	21
5.2.6.2. BACKUP & RESTORE CONFIGURATION.....	21
5.2.6.3. FIRMWARE UPDATE.....	21
5.2.6.4. FACTORY DEFAULT SETTINGS.....	21
5.2.6.5. SYSTEM INFORMATION.....	21
5.2.6.6. REBOOT.....	21
5.2.6.7. LOGOUT – ENDING MANAGEMENT AND CONFIGURATION.....	21
6. USING VIRTUAL PORT SERVICE [REALPORT].....	22

---

6.1. VIRTUAL PORT DRIVER INSTALLATION IN WINDOWS XP.....	22
6.2. REALPORT CONFIGURATION IN WINDOWS XP.....	22
7. FACTORY DEFAULT.....	24
8. PROBLEMS.....	24
9. VERSIONS.....	24
10. SPECIFICATION.....	25

## 1. GENERAL INFORMATION

Thank you for your purchase of **CEL-MAR Company** product. This product has been completely tested and is covered by a two year warranty on parts and operation from date of sale.

If any questions or problems arise during installation or use of this product, please do not hesitate to contact Technical Support at +48 41 362-12-46 or e-mail [support@cel-mar.pl](mailto:support@cel-mar.pl).

### 1.1. WARRANTED INFORMATION

**ADA-13021** converter is covered by a two year warranty from date of sale. In case of being damaged it will be repair or the damaged component will be replace. The warranty does not cover damage caused from improper use, materials consumption or any unauthorized changes. If the product does not function (is damaged), or not operate in accordance with the instructions, will be repaired.

All warranty and no warranty repairs must be returned with paid transport and insuring to the **CEL-MAR Company**.

**CEL-MAR Company** under no circumstances won't be responsible for ensuing damage from improper using the product or as a result of random causes: the lightning discharge, the flood, the fire and the like.

**CEL-MAR Company** is not be held responsible for damages and loss including: loss of profits, loss of data, pecuniary losses ensuing from using or the impossibility of using this product.

In specific cases **CEL-MAR Company** discontinue all warranties and in particular do not follow the user manual and do not accept terms of warranty by the user.

### 1.2. GENERAL CONDITIONS FOR SAFE USE

The device should be installed in a safe and stable places (eg, electroinstallation cabinet), the powering cable should be arranged so as not to be exposed to trampling, attaching, or pulling out of the circuit.

Do not put device on the wet surface.

Do not connect devices for nondescript powering sources,

Do not damage or crush powering wires.

Do not make connection with wet hands.

Do not adapt, open or make holes in casings of the device!

Do not immerse device in water or no other liquid.

Do not put the fire opened on device sources: candles, an oil lamps and the like.

Complete disable from the supply network is only after disconnecting the power supply circuit voltage.

Do not carry out the assembly or dis-assembly of the device if it is enabled. This may result to short circuit and damage the device.

The device can not be used for applications that determine human life and health (eg. Medical).

### 1.3. CE LABEL



The CE symbol on the device **CEL-MAR** means compatibility with electromagnetic compatibility Electromagnetic Compatibility Directive **EMC 2014/30/WE**.

Declaration of Conformity is delivered with purchased converter.

### 1.4. ENVIRONMENTAL PRESERVATION



This sign on the device inform about putting expended device with other waste materials. Device should send to the recycling. (In accordance with the act about the Electronic Appliance Expended from day 29 of July 2005)

### 1.5. SERVICE AND MAINTENANCE

ADA-13021 converter does not require the servicing and maintenance.

Technical support is available at number +48 41 362-12-46 in 8.00-16.00, from Monday to Friday or e-mail [support@cel-mar.pl](mailto:support@cel-mar.pl).

### 1.6. PACK CONTENTS

ADA-13021 converter, user manual, CE declaration, CD with ADANet software.

## 2. PRODUCT INFORMATION

### 2.1. PROPERTIES

- Operating on ETHERNET network- IEEE 802.3 standard,
- 10/100BaseT physical layer,
- Connecting via RJ45 connector,
- Baud rate 10/100Mbps (auto-sensing),
- Full or half duplex (auto-sensing) operate modes,
- Protocols: TCP, UDP, DHCP, SNMP, SSL/TLS, Telnet, Rlogin, LPD, HTTP/HTTPS, SMTP, ICMP, IGMP, ARP,
- Integrated WWW sever for converter configuration,
- Configuration of net services according to user personal setting,
- Static or dynamic IP address (added by DHCP server),
- Diagnostics of serial and network port,
- Encoded transmission: DES (56-bit), 3DES (168-bit), AES (128/256-bit),
- Operating modes: virtual serial port, serial bridge TCP, serial bridge UDP, TCP sockets, UDP sockets,
- Operating on 4-wire line in Current Loop standard,
- Current Loop baud rates (bps): 50, 75, 110, 134, 150, 200, 300, 600, 1200, 1800, 2400, 4800, 9600, 14400, 19200, 28800, 38400,
- Current Loop data format - Number of data bits: 5, 6, 7, 8; Parity checking: None, Odd, Even, Constantly 1, Constantly 0; Stop Bits: 1, 2,

- Transparent for all protocols, which the data format is compatible with the above specifications of Current Loop interface eg MODBUS,
- Power supply 10 - 30 VDC stable min. 3W,
- ~ 3000V= optoizolation in signal channel between ETHERNET and Current Loop interfaces,
- 1000V= or 3000V= galvanic isolation between ETHERNET interface and power supply - depends on version,
- 1000V= or 3000V= galvanic isolation between Current Loop interface and power supply - depends on version,
- Connection Current Loop interface via screw terminal block,
- Implemented short circuit protection and over-voltage protection on Current Loop lines,
- Protection against power supply reverse connection,
- DIN 43880 standard - mounting in typical electro-installation unit,
- Rail mounting according to DIN35 / TS35 standard,
- Dimensions (W x D x H) 53mm x 62mm x 90mm.

## 2.2. DESCRIPTION

The ADA-13021 converter is used for data transmission between devices equipped with Current Loop interface via LAN/WAN network without interfering with data format. In the ETHERNET network converter can operate in Virtual Serial Port mode, TCP serial bridge mode, UDP serial bridge mode, TCP sockets, UDP sockets. The ADA-13021 converter transmits data via Current Loop interface with the baud rate 38,4kbps by the use of 2-pair of twisted-pair cable. The converter has screw terminal block for connection of Current Loop interface and power supply and RJ45 connector for Ethernet network connecting. ADA-13021 uses for operating the signals: RX+,RX-,TX+,TX- of Current Loop interface.

Over-voltage protection was made on base safety diodes and fuses on each Current Loop lines.

To Current Loop interface can be connected one device in point-to-point topology, operates in half duplex or full duplex mode.

This converter has internal, low energy surge protection for each Current Loop lines however it is recommended to use the external lightning arresters (typical protection of telephone line) for the lightning protection of lines.

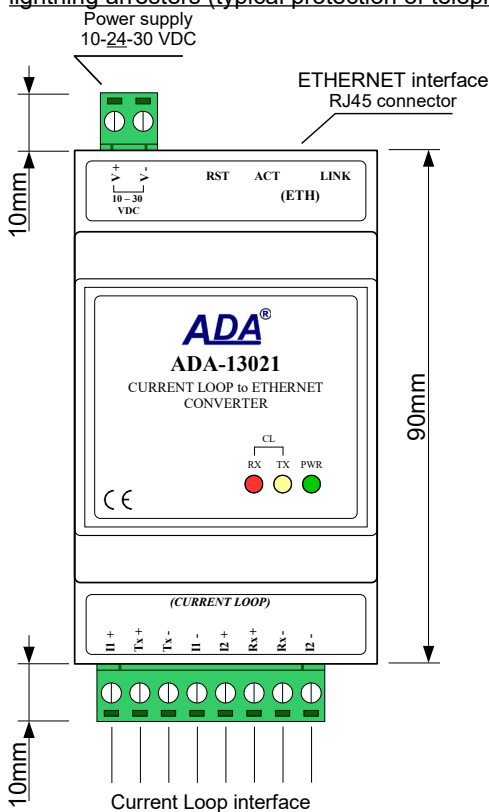


Fig. 1. ADA-13021 view

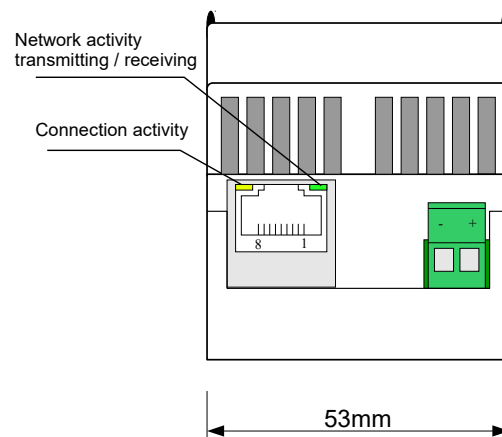
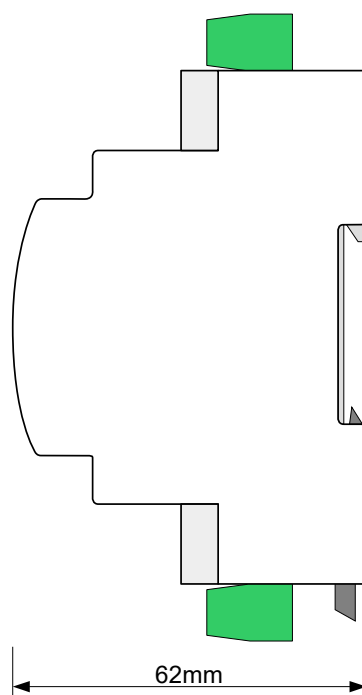


Fig. 2. ETHERNET & power connectors

## 2.3. ETHERNET NETWORK COMMUNICATION

### 2.3.1. TCP/UDP SOCKED MODE COMMUNICATIONS

Communication in the mode TCP/UDP sockets allows an application SCADA, MMI e.t.c., to transfer data to the serial port of the converter via Ethernet network by the use of client and server TCP/UDP services.

### 2.3.2. COMMUNICATIONS IN THE VIRTUAL SERIAL PORT MODE (RealPort)

Communication in the virtual serial port mode allows an application SCADA, MMI e.t.c., to transfer data to the serial port of the converter via Ethernet network, by the use virtual COM port, created in an operating system.

### 2.3.3. COMMUNICATIONS IN THE SERIAL BRIDGE MODE

Communication in the serial bridge mode allows transferring data via Ethernet network between serial port of the converter's ports in one-to-one topology or one-to-many by the use of client and server TCP/UDP services.

### 2.3.4. OTHER COMMUNICATION TYPES

The ADA-13021 converter can be configured in other communication types, like:

- terminal mode,
- modem emulation mode,
- console mode,
- user mode.

However, in the case of the Current Loop converter, it will not be able to work properly in these modes, as they relate to the full RS232 interface.

## 2.4. CURRENT LOOP INTERFACE

### 2.4.1. CURRENT LOOP TRANSMITTER

The Current Loop transmitter in the ADA-13021 was made as a passive 0-20mA(TTY), having low energy short circuit protection on TX+ and TX- lines. By the correct connection of the transmitter with power source I1, Current Loop transmitter 0-20mA can operate as active. The transmitter diagram is shown on figure below.

### 2.4.2. CURRENT LOOP RECEIVER

The ADA-13021 converter has passive RX receiver having low energy short circuit protection on TX+ and TX- lines. By the correct connection of the receiver with power source I2, Current Loop receiver 0-20mA can operate as active. The receiver has signalization of non current flow through optocoupler. It is indicated by the red LED RX on front panel of the converter. This LED lit when it is:

- not connect transmitter to receiver,
- wrong connection of transmitter to receiver,
- broken connection of transmitter to receiver.

The diagram is shown on figure below.

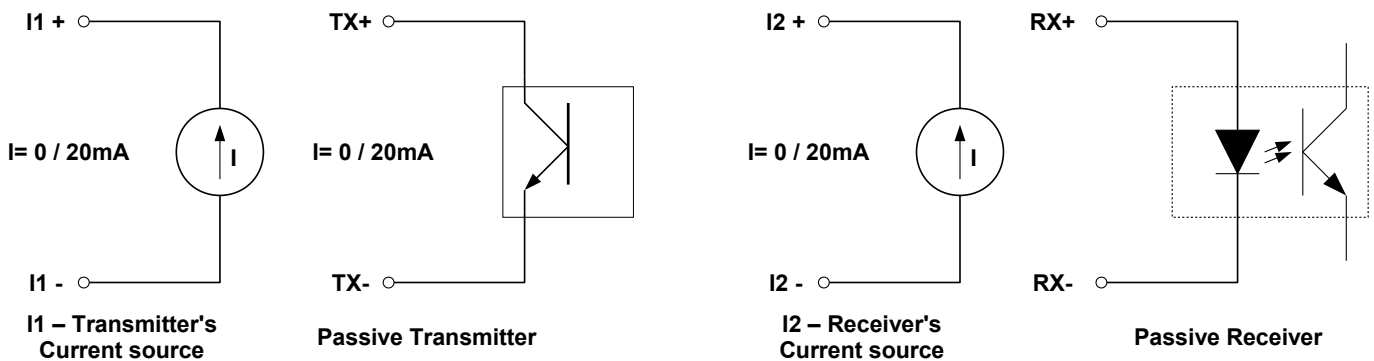


Fig. 3. Diagram of the transmitter & receiver ADA-13021 Current Loop

## 2.5. ISOLATION

Converter ADA-13021 has 3-way galvanic isolation on level 1kV= or 3kV=, depend on version described in section *VERSIONS*.

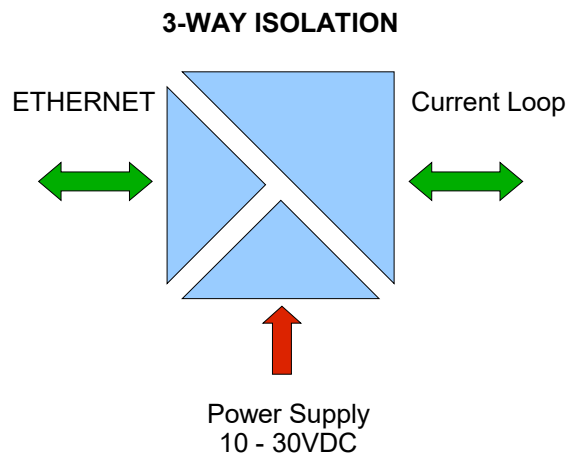


Fig. 4. Isolation structure

## 3. INSTALLATION

This chapter will show how to connect ADA-13021 to Current Loop bus, LAN/WAN network and power supply and how to use it. In the purpose of minimization of disruptions from environment is being recommended to:

- apply multipair type shielded cables, which shield can be connected to the earthing on one end of the cable,
- arrange signal cables in the distance not shorter than 25 cm from powering cables,
- apply cable of adequate cross-section due to voltage drops for converter powering,
- use Interference suppression filters for power supply converters that are installed within a single object.
- not supply converter from power circuit device that generates large impulse interference such as transmitters, contactors,



### 3.1. ASSEMBLING

ADA-13021 converter case is adapted to assembly on TS-35 (DIN35) rail. To install the device on TS-35 should be the upper part of the casing put hooks on the terminal and then press the bottom of the cover until you hear a characteristic "Click" sound.

### 3.2. ETHERNET NETWORK CONNECTION

ADA-13021 has to be connected to ETHERNET network by the use of the switch, the HUB or directly to the PC network adapter.

The table below shows preparing of the straight cable for converter connection to switch or hub.

**Table 1. The straight cable for connection to switch or hub.**

RJ45 Pin No.	Signal	Wire Color EIA/TIA 568B	Straight cable UTP 4x2x0,5	Wire Color EIA/TIA 568B	Signal	RJ45 Pin No.
1	TX+	White-Orange		White-Orange	TX+	1
2	TX-	Orange		Orange	TX-	2
3	RX+	White-Green		White-Green	RX+	3
4	Not used	Blue		Blue	Not used	4
5	Not used	White-Blue		White-Blue	Not used	5
6	RX-	Green		Green	RX-	6
7	Not used	White-Brown		White-Brown	Not used	7
8	Not used	Brown		Brown	Not used	8

The table below shows preparing of cross-over cable for the converter connection to PC network adapter or connections converters together for functioning as point-to-point serial bridge.

**Table 2. The cross-over cable for connection to PC network adapter or connections converters together for functioning as point-to-point serial bridge.**

RJ45 Pin No.	Signal	Wire Color EIA/TIA 568B	Cross-Over Cable UTP 4x2x0,5	Wire Color EIA/TIA 568B	Signal	RJ45 Pin No.
1	TX+	White-Orange		White-Green	TX+	1
2	TX-	Orange		Green	TX-	2
3	RX+	White-Green		White-Orange	RX+	3
4	Not used	Blue		Blue	Not used	4
5	Not used	White-Blue		White-Blue	Not used	5
6	RX-	Green		Orange	RX-	6
7	Not used	White-Brown		White-Brown	Not used	7
8	Not used	Brown		Brown	Not used	8

In the modular socket ETHERNET interface of converter, are implemented two LED's (Fig. 2):

- Green ACT signaling state of sending or receiving data,
- Orange LINK signaling active network connection.


The ADA-13021 converter can function in the ETHERNET network as:

- virtual serial bridge [RealPort],
- TCP serial bridge,
- UDP serial bridge.

Additional information about Ethernet connection will be describe in chapters below.

#### 3.2.1. CONNECTING TO NETWORK ADAPTER OF PC


If there is not the switch or the HUB, it is possible to connect the ADA-13021 directly to a network adapter of PC using the cross-over cable (Table 2). This connection can be used for converter configuration.

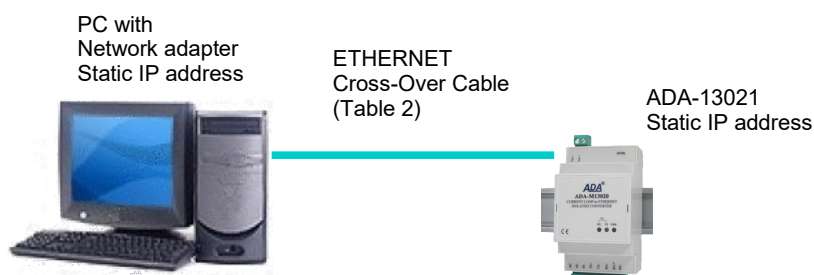


**Fig. 5. Direct connection to PC**

#### 3.2.2. CONNECTING FOR OPERATING IN REALPORT MODE

Fig. 5 (above) and 6, 7 below show how correctly connect the ADA-13021 to LAN, WAN network or PC, to operating in virtual serial port mode (RealPort). For direct connection of the converter to PC network adapter, use the cross-over cable (see Table 2) and for connection by the use of switch or HUB use the straight cable (see Table 1).

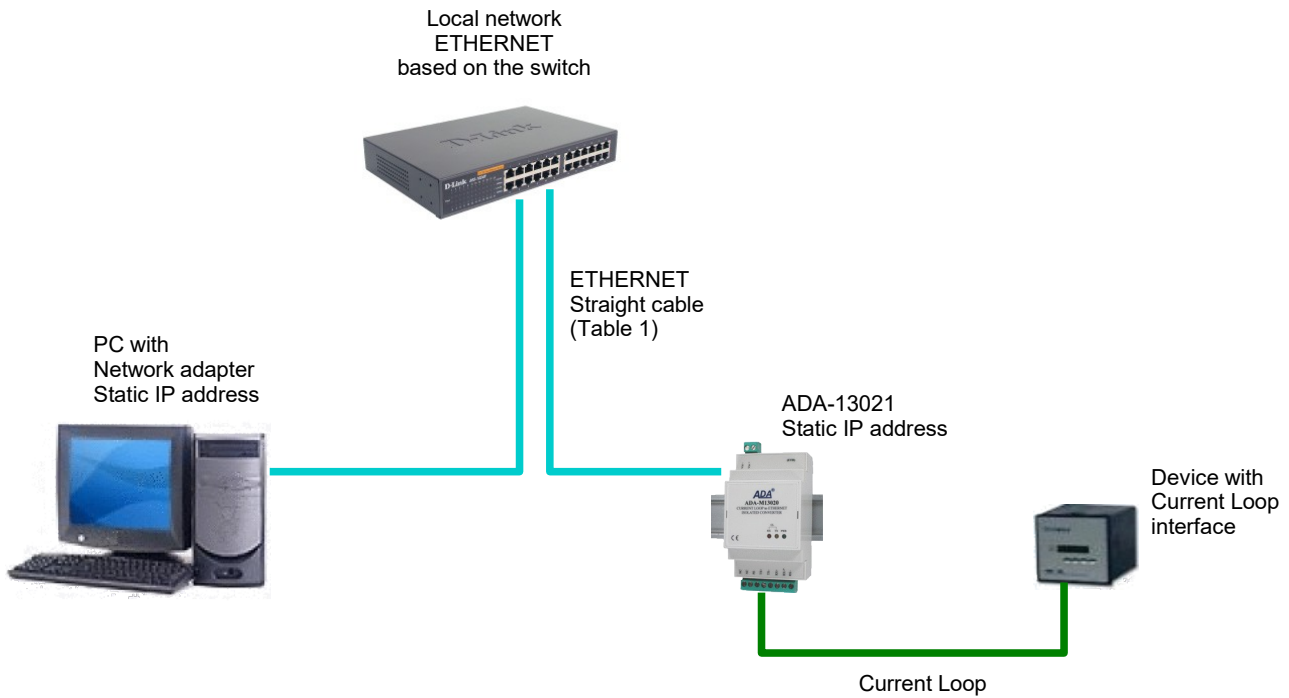

**Fig. 6. The LAN connection via switch/hub to operating in the Real Port mode**

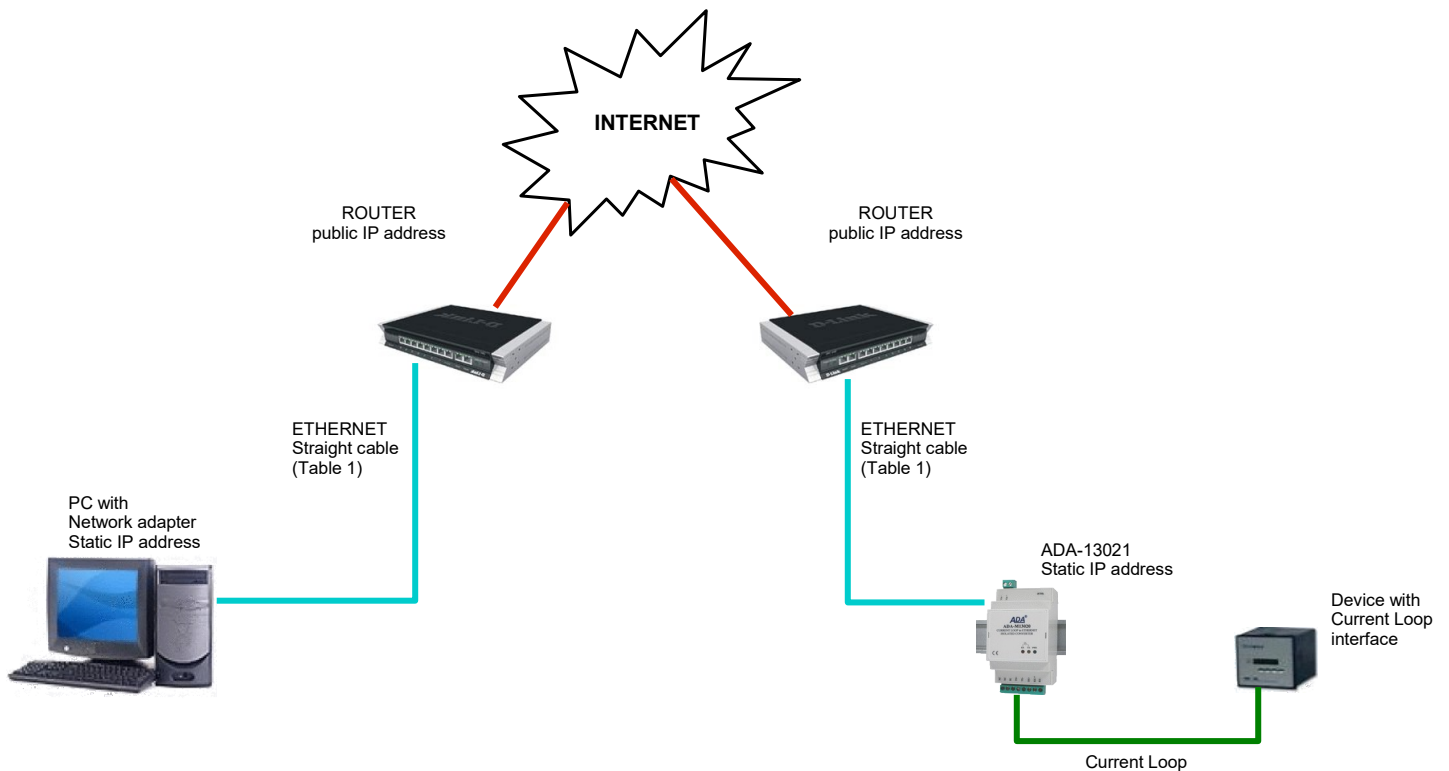


**Fig. 7. The WAN connection to operating in the Real Port mode**


**3.2.3. CONNECTION FOR OPERATING IN TCP & UDP SERIAL BRIDGE MODE**

Pictures below show how correctly connect the ADA-13021 to ETHERNET network to functioning in TCP and UDP serial bridge mode. For connection by the use of network devices (router, switch or HUB) use the straight cable (see Table 1).



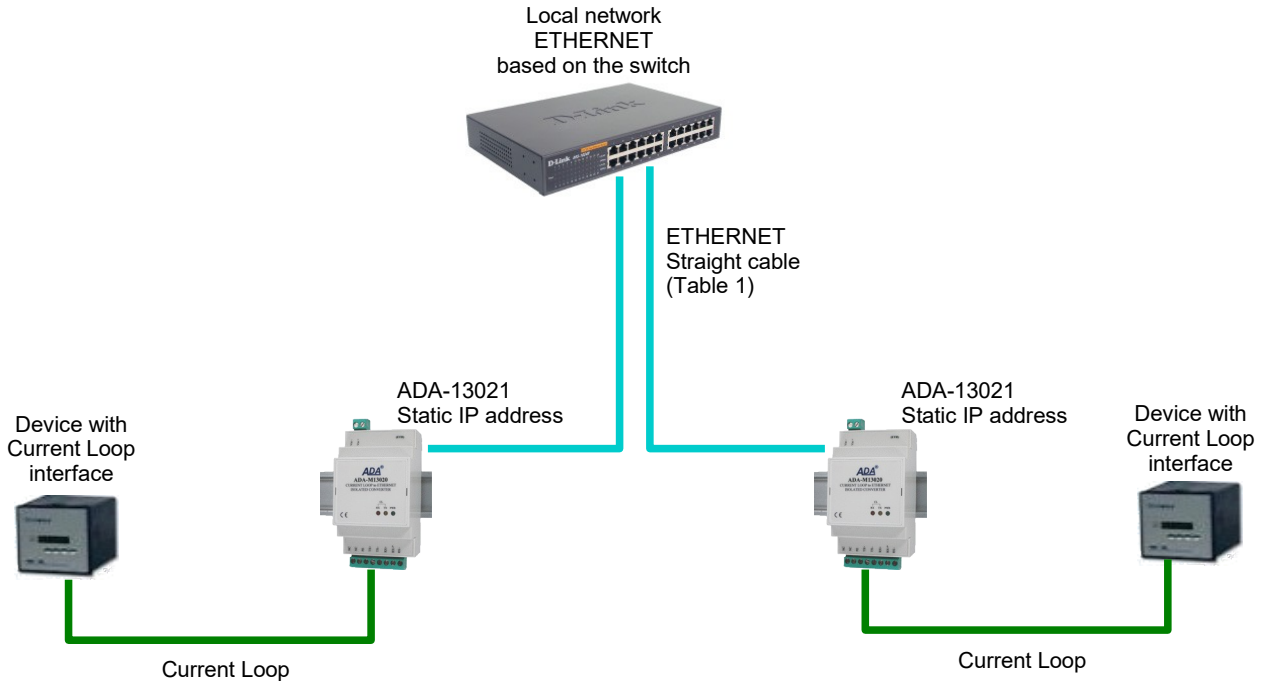

**Fig. 8. The LAN connection to operating in the TCP/UDP serial bridge mode, one-to-one**

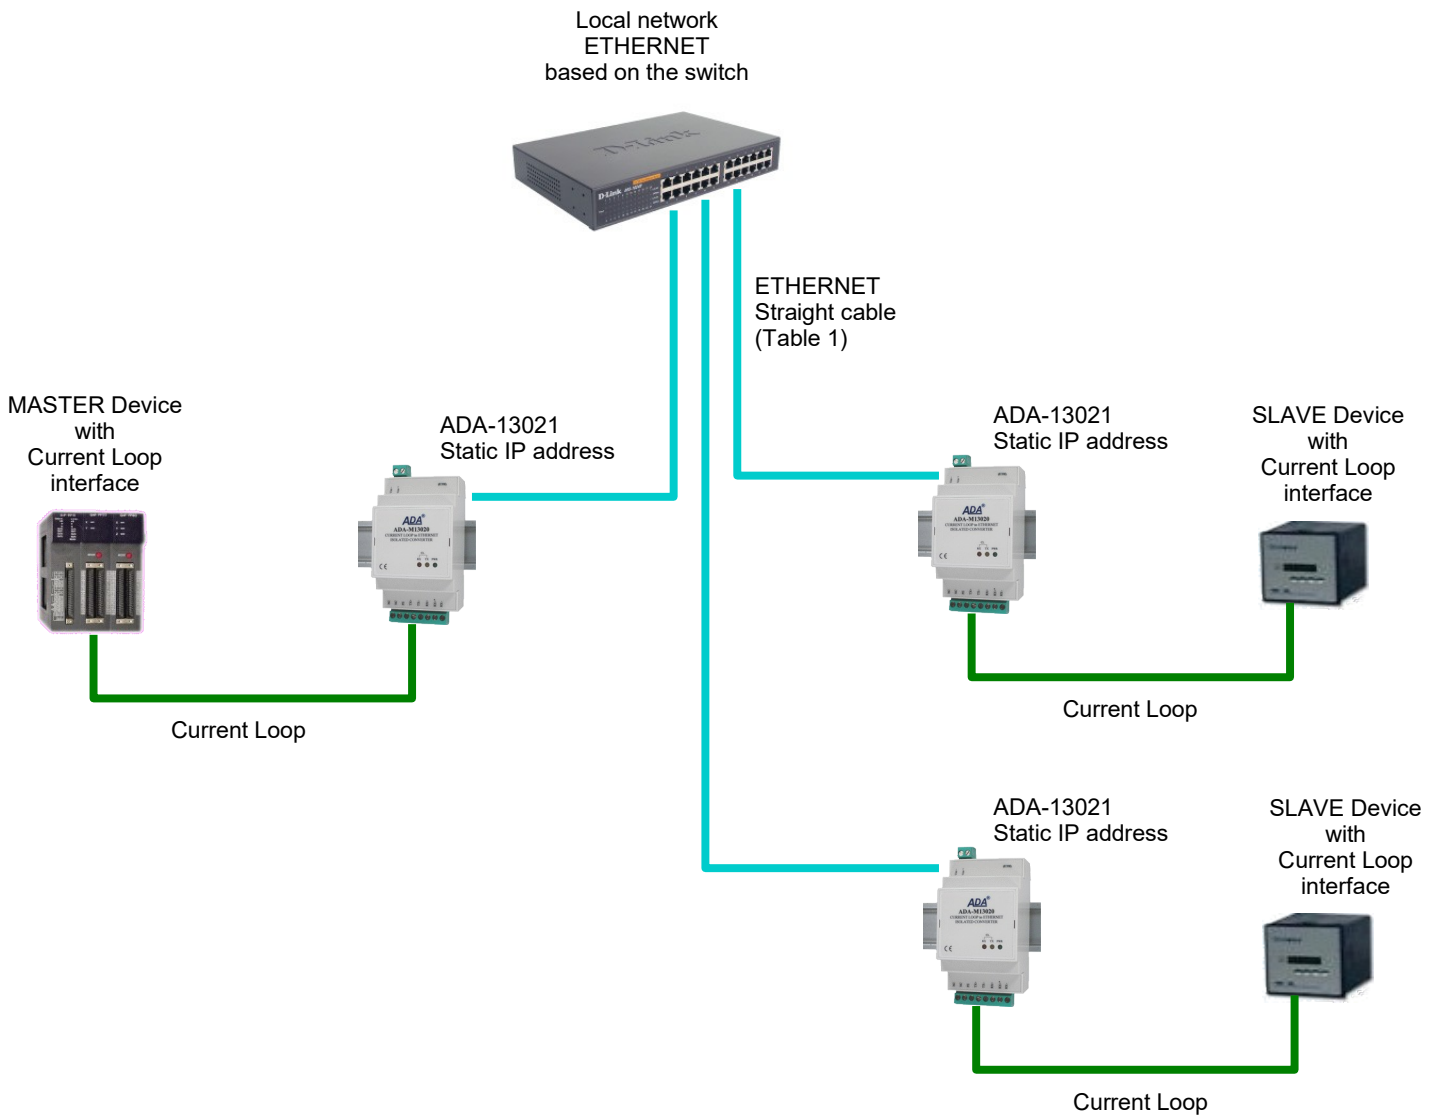

**Fig. 9. The LAN connection to operating in the UDP serial bridge mode, one-to-many**

**3.3. CONNECTION TO CURRENT LOOP DEVICES**

Current Loop line is connected to TX+, TX-, I1+, I1-, RX+, RX-, I2+, I2- terminals of converter as below.

**3.3.1. CONNECTION TO DEVICE WITH PASSIVE TRANSMITTER & PASSIVE RECEIVER**

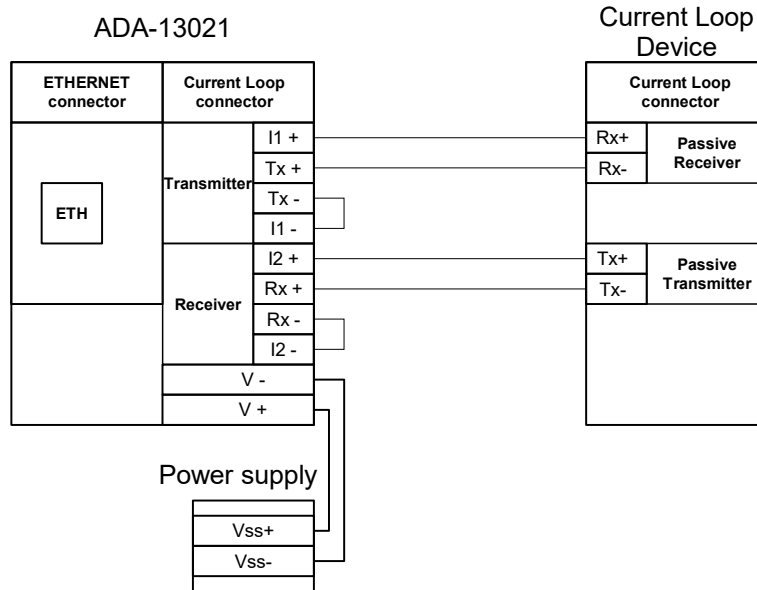


Fig. 10. Example connection of device with passive transmitter and passive receiver to ADA-13021

**3.3.2. CONNECTION TO DEVICE WITH ACTIVE TRANSMITTER & ACTIVE RECEIVER**

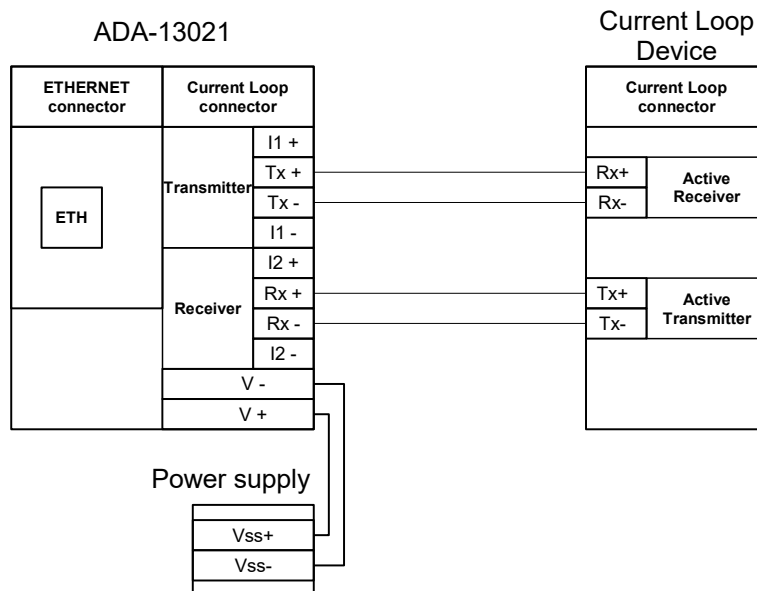


Fig. 11. Example connection of device with active transmitter and active receiver to ADA-13021

**3.3.3. CONNECTION TO DEVICE WITH ACTIVE TRANSMITTER & PASSIVE RECEIVER**

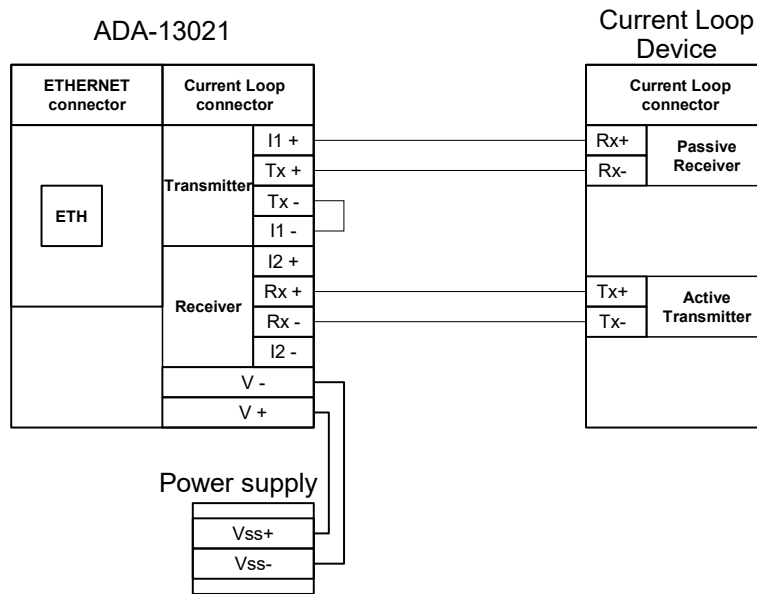


Fig. 12. Example connection of device with active transmitter and passive receiver to ADA-13021

**3.3.4. CONNECTION TO DEVICE WITH PASSIVE TRANSMITTER & ACTIVE RECEIVER**

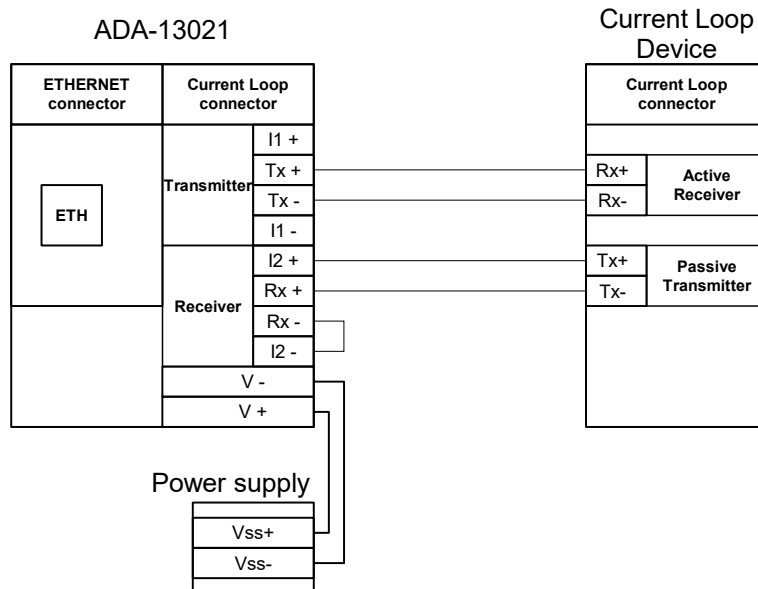


Fig. 13. Example connection of device with passive transmitter and active receiver to ADA-13021

**3.4. POWER SUPPLY CONNECTION**

The power supply to the ADA-13021 converter should be DC (regulated) from 10 V= to 30V=. Nominal power is typically 3W, e.g. HDR-15-24. Power cable from DC power supplies to device must not be longer than 3m. Observe the polarity, connect positive (+) of DC power supplies to V+ and negative (-) end to V- terminal. ADA-13021 has the protection from opposite connection power supply.

#### 4. ACTIVATION

Converter can be powered after proper connection according to steps above. If the connection was made properly green LED PWR on front panel of converter should lit, if not check polarization of power connection. During proper data transmission through converter the LEDs Tx and Rx on the front panel and on RJ45 connector of Ethernet interface should blink. This LED are described below:

<i>LED</i>	<i>Description</i>
<b>RS485/RS422 interface &amp; Power</b>	
PWR	Signalization of power supply
RX	Signalization of data receiving by ADA-13021 from Current Loop.
TX	Signalization of data transmission from ADA-13021 converter through Current Loop
<b>ETHERNET interface</b>	
yellow LINK	Signaling a valid connection to the network
green ACT	Signaling data transmission

#### 5. CONFIGURATION

The ADA-13021 converter like most of network devices should be configured for proper functioning, it's needed configuration of network services and network setting.

Below are described the stages of software installation and network setting configuration of converter.

##### 5.1. INITIAL CONFIGURATION USING ADAFINDER SOFTWARE

###### 5.1.1. ADAFINDER INSTALLATION

The initial configuration of network setting at the converter can be made by using ADAFinder or ADAWiz software. The installation is automatically after insert the CD (compact disc) to an optical drive. If the autorun doesn't start, should run the file setup.exe located in main CD catalogue. After installation the software ADAFinder and ADAWiz are available in **Start->Programs->CEL-MAR->ADANet**.

###### 5.1.2. NETWORK SETTING

ADAFinder is use for initial configuration of converter's network setting.

**Before running ADAFinder should be disabled the System FireWall!**

After running, the program is searching local network and if find ADA-13021, will add them to the list of available converters **[Devices:]** Fig.14.

To change the network setting of ADA-13021, should:

- select the converter from the list **[Devices:]** and press **[Configure IP Settings ]**,
- in windows **[Set IP Address]** select option **'Automatically obtain network settings via DHCP'** (default setting) or **'Manually configure network setting'**. In case of manual configuration should be enter IP Address of the converter, Subnet Mask, Default Gateway and the Password (default: dbps) of the ADA-13021 administrator for authorization of changes.
- press **[Apply]**, configuration will be saved to the converter and will restart. After message **'Operation made successfully'**, press **[Refresh List]** in ADAFinder window. After re-searching the lists of available converters **[Devices:]** will be refreshed.

Other buttons of the program main menu:

- selecting the converter from the list and pressing **[Reboot Device]**, will make programmable reset of the converter – new configuration of network setting will be activated,
- selecting the converter from the list and pressing **[Device Information]**, will show an information about setting of the converter,
- selecting the converter from the list and pressing **[Open Web Interface]**, will run Internet browser and open the configuration page of the converter.

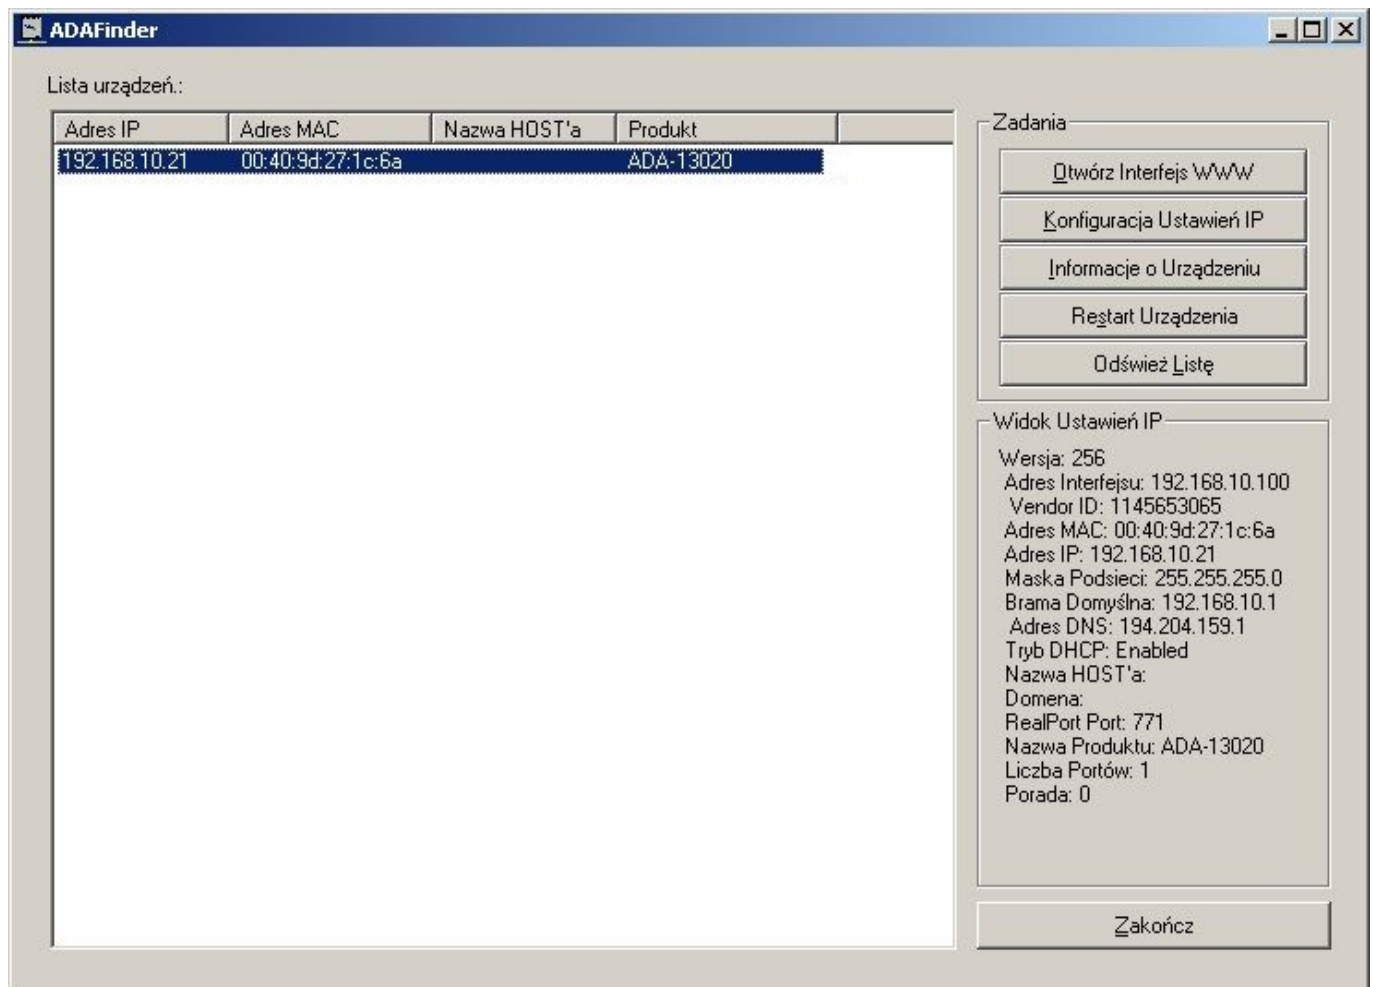


Fig. 14. Base configuration network by the use ADAFinder software

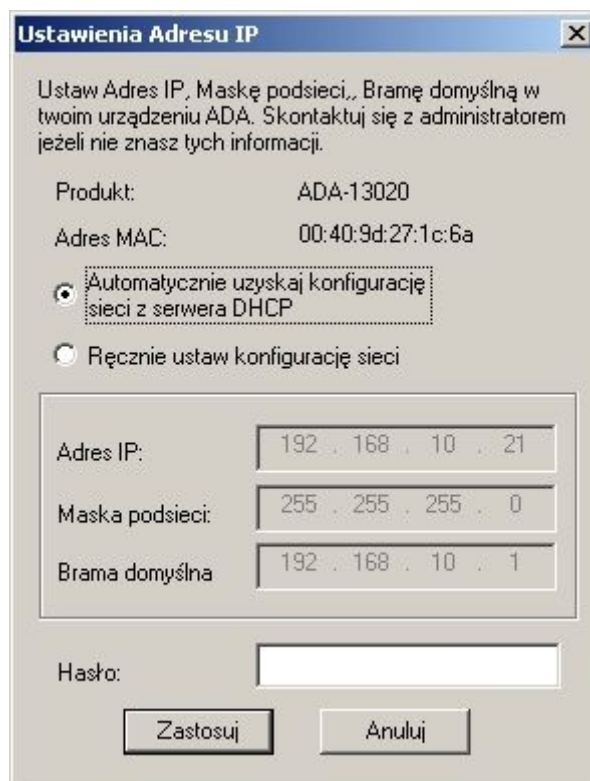


Fig. 15. ADAFinder configuration of IP network address

## 5.2. CONFIGURATION AND MANAGEMENT BY THE USE OF INTERNET BROWSER

Integrated WWW server to ADA-13021 enable to easy configuration and diagnostics of LAN and WAN network devices by the use Internet browser.

For configuration open the Internet Browser and type the address **http://<converter-ip-address>/admin/administration.htm**. The login windows will open. Enter User name and Password as follow:

Username: root

Password: dbps

If the the Username and the Password are correct, will open the page as below.

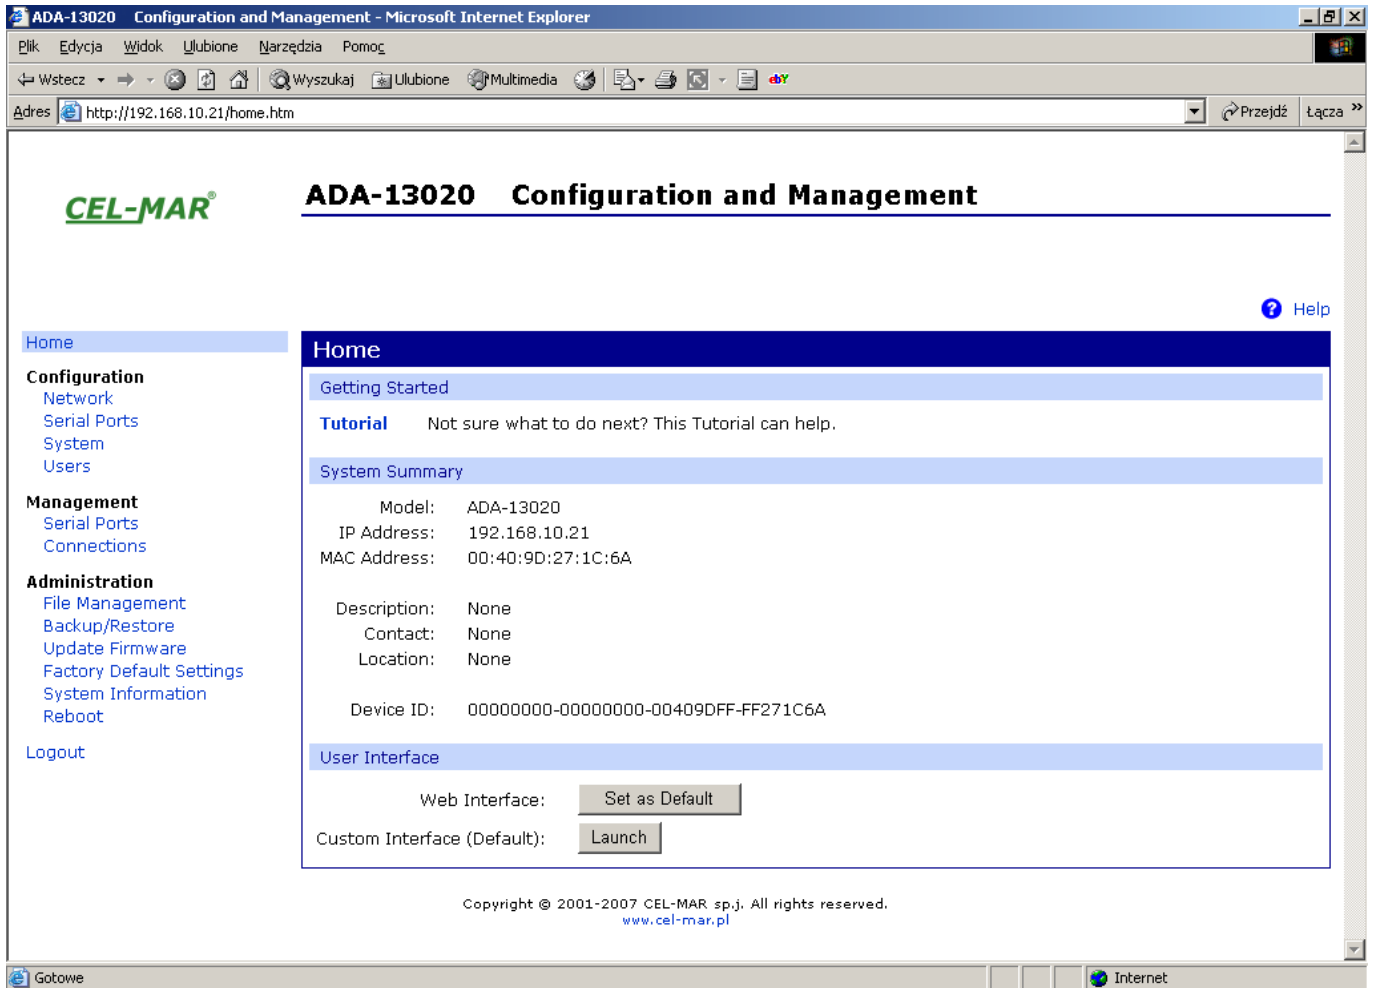


Fig. 16. The web page for configuration and management of ADA-13021

### 5.2.1. NETWORK CONFIGURATION

To make a changes of default setting or new configuration of ADA-13021, select on left panel **Configuration -> Network** and then on right **[IP Settings]** (Fig.16) and make the selection: **Obtain an IP address automatically using DHCP** or **Use the following IP address** (in this option, enter IP Address of the converter, Subnet Mask, Default Gateway), press **[Apply]** for save. After the message **Changes have been saved successfully**, from left menu select **Administrator -> Reboot** on right press **[Reboot]**, will be programmable reset of the converter and new configuration of network setting will be activated.

**Network Configuration**

▼ IP Settings

Obtain an IP address automatically using DHCP \*

Use the following IP address:

\* IP Address:

\* Subnet Mask:

Default Gateway:

\* Changes to DHCP, IP address and Subnet Mask require a reboot to take effect.

Apply

▶ Network Services Settings

▶ Advanced Network Settings

Copyright © 2001-2007 CEL-MAR sp.j. All rights reserved.  
[www.cel-mar.pl](http://www.cel-mar.pl)

Fig. 17. The web page for network setting of ADA-13021

## 5.2.2. SERIAL PORT CONFIGURATION

The configuration of serial port of ADA-13021 converter includes: port description, setting of port profile (operating mode) and setting of serial transmission parameters (baud rate, data bits, parity, stop bits).

Select on left panel **Configuration -> Serial Ports** and then on a page **Serial Port Configuration** select **[Port 1]**, will open the configuration details page, includes:

- Port Profile Settings,
- Basic Serial Settings,
- Advanced Serial Settings,

### 5.2.2.1. SERIAL PORT PROFILE CONFIGURATION (OPERATING MODE)

Select on right panel **Serial Port Configuration -> Port Profile Settings** and then press **Change Profile...** will open the page **Select Port Profile** for selection of available port profiles (fig. 18).

Configuration of profile used in typical solutions will be presented in next chapters.

The ADA-13021 operates properly in profiles as follow:

- RealPort
- TCP Sockets
- UDP Sockets
- Serial Bridge

Configuration of profiles will be presented in next chapters.



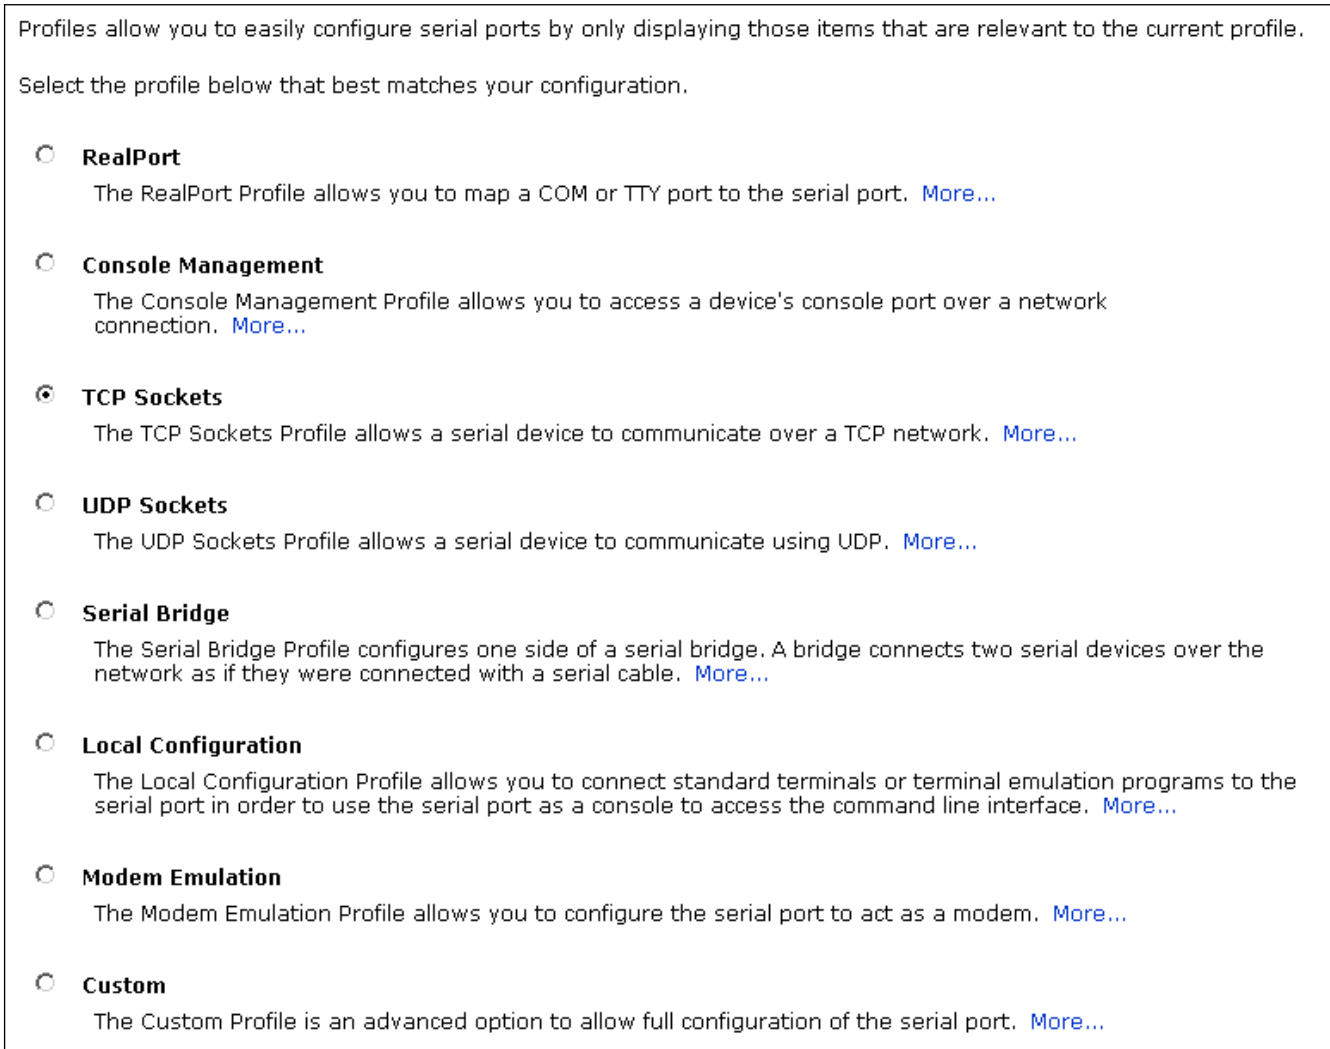


Fig. 18. Selection serial port profile web

**5.2.2.1.1. REALPORT (VIRTUAL PORT ) CONFIGURATION**

Choosing **RealPort** (Virtual Port, Fig. 18) is configured the serial port of ADA-13021, for communication with virtual port COM of computer. Press **[Apply]** for save. After installation driver (RealPort) of virtual port COM (see chapter 6) in operating system, data sending by application to this port are transferred through WLAN/WAN to ADA-13021 converter and are present on his serial port. The driver **RealPort** installation is presented in chapter 6. Normally **RealPort** service allows for one connection through WLAN/WAN, between computer and server port.

Connection from other computers to the converter will be not taken, what will cause the error message.

**5.2.2.1.2. TCP SOCKETS CONFIGURATION**

Choosing **TCP Sockets** is configured the serial port of ADA-13021, for direct communication with PC or other network device by the use of TCP socked. Data sending by application/device to TCP socked are transferred through network to ADA-13021 converter and are present on his serial port. To save selected configuration, press the button **[Apply]**.

**5.2.2.1.2.1. TCP SERVER & CLIENT CONFIGURATION**

After saving the profile in section **TCP Server Settings**, set parameters of TCP server. As on the picture below set correct services and proper ports on which are working. Additionally there is the possibility of selection **Enable TCP Keep Alive** – connection will be kept, even if the data is not transmitted over the network.

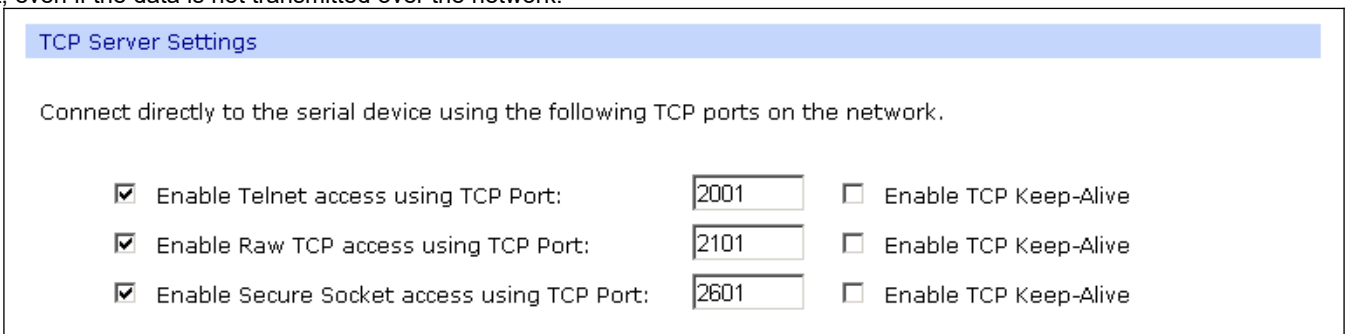


Fig. 19. Example configuration of TCP server

For configuration of **TCP Client Settings** (TCP Client Setting, fig. below), select **Automatically establish TCP connections**, connection between client and TCP server will be automatically. Then select **Always connect and maintain connection** option and in section **Establish connection to the following network service** enter IP address of device to which TCP client will send data, select service and enter port. There is also possible to select an option **Enable TCP Keep-Alive** – connection will be kept, even if the data is not transmitted over the network.

For saving the configuration press **[Apply]**.

**TCP Client Settings**

Automatically establish bi-directional TCP connections between the serial device and a server or other networked device.

Automatically establish TCP connections

Establish connection under one of the following conditions:

- Always connect and maintain connection
- Connect when data is present on the serial line
 

Match string:

  - Strip string before sending
- Connect when DCD (Data Carrier Detect) line goes high
- Connect when DSR (Data Set Ready) line goes high

Establish connection to the following network service:

IP Address:

Service:

TCP Port:

Enable TCP Keep-Alive

Fig. 20. Example configuration of TCP client

**ATTENTION !**  
**Default port of serial port service is 2101.**  
**If on the local network is conflict with other network service using the same port, in the converter's port configuration change number of port into another for the server and client service .**

**5.2.2.1.2.2. 'ENABLE TCP KEEP-ALIVE' OPTION CONFIGURATION**

Option **Enable TCP Keep-Alive** keeps connection between server and client, even if the data is not transmitted over the network and reconnection in case of interruption.

Configuration of this option can be made by selection **Configuration -> Network -> Advanced Network Settings -> TCP Keep-Alive Settings**. In this section can be configured:

- **Idle Time** – specifies the period (scope 10 sec. - 24 hours) that a TCP connection has to be idle before a keep-alive is sent.
- **Probe Interval** – the time in seconds between each keep-alive probe (scope 10 – 75 sec.),
- **Probe Count** – the number of times TCP probes the connection to determine (scope 5 – 30 trials).

**5.2.2.1.2.3. SERIAL PORT TRANSMISSION PARAMETERS CONFIGURATION**

For proper operation of ADA-13021 with device connected to his serial port (Current Loop), should be set the same transmission parameters for both devices.

Select **Basic Serial Settings** and enter **Baud Rate, Data Bits, Parity, Stop Bits**, the same parameter like has device connected to the serial port of the converter.

**5.2.2.1.3. UDP SOCKETS CONFIGURATION**

Choosing **UDP Sockets** (Fig.18) is configured the serial port of ADA-13021 converter for direct communication with PC or other device connected to the network by the use of UDP socket. Data sending by application or other device/s to this port are transferred through LAN/WAN to ADA-13021 converter and are present on his serial port. Press **[Apply]** for save the configuration.

**5.2.2.1.3.1. UDP CLIENT & SERVER CONFIGURATION IN CASE OF MASTER DEVICE**

After saving the UDP Sockets profile, will open section **UDP Server Settings** with operating parameters like on picture below. Set access to UDP server on e.g. 2101 port. Then select **Automatically send serial data** in section **UDP Client Settings**, this automatically send received data by the use UDP client service to the SLAVE device connected to LAN/WAN through e.g. ADA-13021 ADA-13020, ADA-13028L, ADA-13040MG, ADA-13110, ADA-14040, ADA-14040.

On lists **Send data to the following network services** are addresses of network devices and ports to which will be send data. In field:

- **Description** - enter e.g. location of the converter and SLAVE device,
- **Send To** - enter IP address of e.g. converter, connected to SLAVE device,
- **UDP Port** - enter the number of port on which is working UDP Server of converter connected to SLAVE device

In the section **Send data under any of the following conditions** is recommended to set parameters like on picture bellow. For saving the configuration of UDP client and server for MASTER device, press **[Apply]**.

**UDP Server Settings**

The serial device receives data from one or more devices or systems on the network using UDP sockets.

Enable UDP access using UDP Port:

---

**UDP Client Settings**

Automatically send serial data to one or more devices or systems on the network using UDP sockets.

Automatically send serial data

Send data to the following network services:

Description	Send To	UDP Port	
HALA-1	192.168.10.131	2101	<a href="#">Remove</a>
HALA-2	192.168.10.132	2101	<a href="#">Remove</a>
<input style="width: 100%;" type="text" value="HALA-3"/>	<input style="width: 100%;" type="text" value="192.168.10.133"/>	<input style="width: 60px;" type="text" value="2101"/>	<input type="button" value="Add"/>

Send data under any of the following conditions:

Send when data is present on the serial line  
Match string:

Strip string before sending

Send after following number of idle milliseconds  
 ms

Send after the following number of bytes  
 bytes

**Fig. 21. Example configuration of the UDP server&client on converter connected to MASTER device**

### 5.2.2.1.3.2. UDP CLIENT & SERVER CONFIGURATION IN CASE OF SLAVE DEVICE

Set operating parameters of UDP server on the converter connected to SLAVE device eg. like on picture below. Set an access to UDP server on e.g. 2101 port. Then select **Automatically send serial data** in section **UDP Client Settings**, this automatically send received data by the use UDP client service to the MASTER device connected to LAN / WAN through e.g. ADA-13020, ADA-13028L, ADA-13040MG, ADA-13110, ADA14040, ADA-14040.

On lists **Send data to the following network services** are addresses of network devices and ports to which will be send data. In field:

- **Description** - enter e.g. location of the converter and MASTER device,
- **Send To** - enter IP address of converter connected to MASTER device,
- **UDP Port** - enter the number of port on which is working UDP Server of converter connected to MASTER device

In the section **Send data under any of the following conditions** is recommended to set parameters like on picture bellow. For saving the configuration of UDP client and server for SLAVE device, press **[Apply]**.

**UDP Server Settings**

The serial device receives data from one or more devices or systems on the network using UDP sockets.

Enable UDP access using UDP Port:

**UDP Client Settings**

Automatically send serial data to one or more devices or systems on the network using UDP sockets.

Automatically send serial data

Send data to the following network services:

Description	Send To	UDP Port	
CENTRALA	192.168.10.121	2101	Remove
<input type="text"/>	<input type="text" value="0.0.0.0"/>	<input type="text" value="0"/>	<input type="button" value="Add"/>

Send data under any of the following conditions:

Send when data is present on the serial line  
Match string:

Strip string before sending

Send after following number of idle milliseconds  
 ms

Send after the following number of bytes  
 bytes

**Fig. 22. Example configuration of the UDP server&client on converter connected to SLAVE device**

**ATTENTION !**

Default port of serial port service is 2101.

If on the local network is conflict with other network service using the same port, in the converter's port configuration change number of port into another for the server and client service .

**5.2.2.1.3.3. SERIAL PORT TRANSMISSION PARAMETERS CONFIGURATION**

For proper operation of ADA-13021 with device connected to his serial port (Current Loop), should be set the same transmission parameters for both devices.

Select **Basic Serial Settings** and enter **Baud Rate, Data Bits, Parity, Stop Bits**, the same parameter like has device connected to the serial port of the converter.

**5.2.2.1.4. SERIAL BRIDGE PROFILE CONFIGURATION**

Choosing the **Serial Bridge** (Fig.18) profile enable direct communication between two devices connected to two ADA-13021 converters over the network as if they were connected with a serial cable. A properly configured ADA-13021 will start automatically communication with each other. Press **[Apply]** for save the configuration

After saving the Serial Bridge profile, will open section **Serial Bridge Settings** (fig. below) with operating parameters like on picture below. Select **Initiate serial bridge to the following device** option and enter IP address and 2101 port of the converter with which to create the serial bridge over the network. Additionally can be selected **[Enable TCP Keep-Alive]** option which keeps connection even if the data is not transmitted. Select **Allow other devices to initiate serial bridge** and enter 2101 port on which other the converter will automatically start communication and can be set also **[Enable TCP Keep-Alive]** option which keeps connection even if the data is not transmitted.

Serial Bridge Settings

Initiate serial bridge to the following device:

IP Address:

TCP Port:   Enable TCP Keep-Alive

Allow other devices to initiate serial bridge

TCP Port:   Enable TCP Keep-Alive

Enable secure serial bridge using secure sockets (SSL)

Fig. 23. Example configuration of TCP Serial Bridge

**ATTENTION !**

Default port of serial port service is 2101.

If on the local network is conflict with other network service using the same port, in the converter's port configuration change number of port into another for the server and client service .

#### 5.2.2.1.4.1. SERIAL PORT TRANSMISSION PARAMETERS CONFIGURATION

For proper operation of ADA-13021 with device connected to his serial port (Current Loop), should be set the same transmission parameters for both devices.

Select **Basic Serial Settings** and enter **Baud Rate, Data Bits, Parity, Stop Bits**, the same parameter like has device connected to the serial port of the converter.

#### 5.2.3. SYSTEM SETTINGS

Select on left panel menu **Configuration -> System** and then on right will be selections as follow:

- **Device Identity Settings** – allows to add name of converter, describe the location and add identification number,
- **Simple Network Management Protocol Settings (SNMP)** – allows to make the configuration of management protocol SNMP.

#### 5.2.4. USERS CONFIGURATION

On the configuration page **Users** are two sections:

- **Users**
- **Configure Users**

The section **Users** allows to configure the method of login to ADA-13021. Selecting the option **Enable user logins** means that after enter the address <http://<adres-ip-konwertera>/admin/administration.htm> to internet browser, will open login window and will be necessary to enter user name and password.

The section **Configure Users** allows to add additional user, change password, configure access and permissions for each defined users.

##### 5.2.4.1. CHANGING USER MANE AND PASSWORD

Changing the default user root and password, can be done as follow :

1. press user mane **root** in section **Users Configuration->Configure Users**,
2. enter new user name and password.
3. press [**Apply**] for saving.

##### 5.2.4.2. ADDING NEW USER WITH LIMITED PERMISSIONS FOR CONFIGURATION OR MANAGEMENT

For adding new user with limited permissions for configuration or management of the converter, follow the steps below:

1. From menu **Configuration** select **Users**,
  2. In section **Configure Users**, press [**New...**],
  3. Enter user mane (eg. **admin**) and password – twice, and press [**Apply**],
  4. Will open the page **Users Configuration**, where in section **Configure Users**, will be new user name.
- Now it is possible to configure access permissions to the converter and permissions for configuration of this new user.

Configuration of access to converter:

1. From menu **Configuration** select **Users**,
2. In section **Configure Users**, select added user eg. **admin**,
3. Will open the page **User Configuration** – admin, where are sections:
  - A/ **User Configuration** – possibility of rename user and password,
  - B/ **User Access** - method of access to converter from the network:
    - Allow command line access** – access using the Command Line Interface - **telnet**,
    - Allow web interface access** – access using the internet browser.
  - C/ **User Permissions** - user permissions to configuration and management of the ADA-13021 converter, where are an options:
    - None** - no permission,

- Read** - permission to read,
- Read Self** - permission to read own settings, but not other users.
- Read/Write** - full permission to read and write the setting.
- Read/Write Self** - permission to read and write own setting, but not other users.
- Read All/Write Self** - permission to read the setting for all users and modify only own setting (not other users).
- Execute** - permission to execute (start).

4. All changes are saved by pressing **[Apply]**.

### 5.2.5. MANAGEMENT

On left panel in menu **Management** are to sections :

- **Serial Ports**
- **Connections**

#### 5.2.5.1. SERIAL PORTS MANAGEMENT

Section **Serial Ports** allows to identification connections/disconnection to the serial port of the converter through the network.

#### 5.2.5.2. CONNECTIONS MANAGEMENT

Section **Connections** allows to identification connections/disconnection to the converter through the network.

### 5.2.6. ADMINISTRATION

The menu **Administration** allows :

- to delete/upload files with Java applet,
- to backup/restore configuration of converter,
- to update Firmware,
- to restore the factory default settings,
- to display system details information,
- to reboot the converter.

#### 5.2.6.1. FILE MANAGEMENT

Section **File Management** enables upload and delete Web provided by manufacturer. Uploaded index.htm or index.html allows to automatically run the page in the web browser after entering <http://address-ip-convertera/FS/WEB/index.htm> and login to ADA-13021.

#### 5.2.6.2. BACKUP & RESTORE CONFIGURATION

Section **Backup/Restore** enables backup to file or restore from file the user configuration of the converter.

#### 5.2.6.3. FIRMWARE UPDATE

Section **Update Firmware** enables to make the update firmware form the file. Firstly should be done update the POST software before updating the firmware – more details available on the web page <http://www.cel-mar.pl>.

#### 5.2.6.4. FACTORY DEFAULT SETTINGS

The converter was configured by the manufacturer.

To restore factory default settings, select from menu **Factory Default Settings**. After that the converter will automatically reboot.

#### 5.2.6.5. SYSTEM INFORMATION

Section **System Information** displays:

- **General** – device model , MAC address, firmware version, Boot version, POST version and more.
- **GPIO** – not applicable in ADA-13021.
- **Serial** – port description, current settings of serial port, status of controlling lines and the statistics data transfer through the serial port.
- **Network** – show statistics of ETHERNET interface for IP, TCP, UDP, ICM protocols.

#### 5.2.6.6. REBOOT

Section **Reboot** allows to make software reset of ADA-13021. Pressing **[Reboot]** will start rebooting of server during 1 min.

#### 5.2.6.7. LOGOUT – ENDING MANAGEMENT AND CONFIGURATION

After completion of the configuration or administration should be pressing **Logout** on left panel – logout from www server of ADA-13021 converter.



## 6. USING VIRTUAL PORT SERVICE [REALPORT]

### 6.1. VIRTUAL PORT DRIVER INSTALLATION IN WINDOWS XP

The installation of virtual serial port drivers should be done for the CD, by choosing:

- Win Server-2003-2008-2012
- Win-2000
- Win-98-ME
- Win-NT4.0SP5
- Win-Vista
- Win-XP-7-8

**Installation of Virtual serial port drivers is as follow:**

1. connect the ADA-13021 to ETHERNET network and to power supply (see p.3.2.1 - 3.2.2.),
2. press **[Start]** and select **[Run...]**,
3. in the dialog window **[Run]** press **[ Browse ]**,
4. select „**My computer**” and CD-Rom with „**ADANET\_DRV**”,
5. select catalog **Drivers/Windows/Win-XP-7-8**,
6. select file „**Setup.exe**” for 32-bits system or „**Setup64.exe**” for 64-bits and press **[Open]**,
7. when the installation window will appear press **[Next]**,
8. will start the searching for the wireless serial servers in the network, founded devices will be added to the list.
9. select the wireless serial servers from the list for installation of virtual port driver and press **[Next]**.
10. in window Describe the device select or not the Starting Com port and press **[Finish]**. The driver will be installed.

**The Virtual Serial Port Drivers can be installed without connection of ADA-13021 to ETHERNET network and it is as follow:**

1. press **[Start]** button, select **[Run...]**
2. in the dialog window **[Run]** press **[ Browse ]**
3. select „**My computer**” and CD-Rom with „**ADANET\_DRV**”.
4. select catalog **Drivers/Windows/Win-XP-7-8**.
5. select file „**Setup.exe**” for 32-bits system or „**Setup64.exe**” for 64-bits and press **[Open]**.
6. when the installation window will appear press **[Next]** .
7. will start the searching for converters in the network.
8. if no devices were not found press **[Next]**.
9. should be set in the window Describe the device:
  - IP address for wireless serial server,
  - number of installing COM port (No. Ports)
  - Starting COMand press **[Finish]**. The driver will be installed.

**In this way installed virtual port can require the configuration in case of connecting the wireless serial server to network.**

### 6.2. REALPORT CONFIGURATION IN WINDOWS XP

After installation of RealPort drivers, can be done the configuration by the use the Device Manager of Windows and it is as follow:

1. Press **[ Start ]**, select **[ Properties/Setting ]**, press **[ Control Panel ]**.
2. Double click icon **[ Administrative Tools ]** and **[ Device Manager ]**
3. Press **[Ports (COM & LPT)]**. On fig. 29 are shown available serial ports COM1, COM2 and **COM3** marked as **Digi Connect ME** which was created after installation of RealPort driver.
4. Then select **[Multi-port Serial Adapter]**, there will be the name **ADA-13021** .
5. Double click the name and the window **[Properties]** will appear.
6. Select **[Advanced]** and press **[Properties]**.
7. Enter **new name of virtual port for wireless serial server**. In the window **[Advanced Properties]** click **[ADA-13021]** and then select **[Properties]**, press **[Rename Ports]**, now it is possible to change the name of virtual port driver for example COM5, COM11 etc. To accept the changes press **[OK]**.
8. **Select IP address, MAC, DNS server for communication with virtual port driver**. In the window **[ Advanced Properties ]** click **[ADA-13021]** and then select **[Network]** (Fig. 30), and set the **IP address, MAC Address** or **DNS name** of the wireless serial server for communication with virtual port driver.
9. In the next window press **[OK]** to accept the changes.



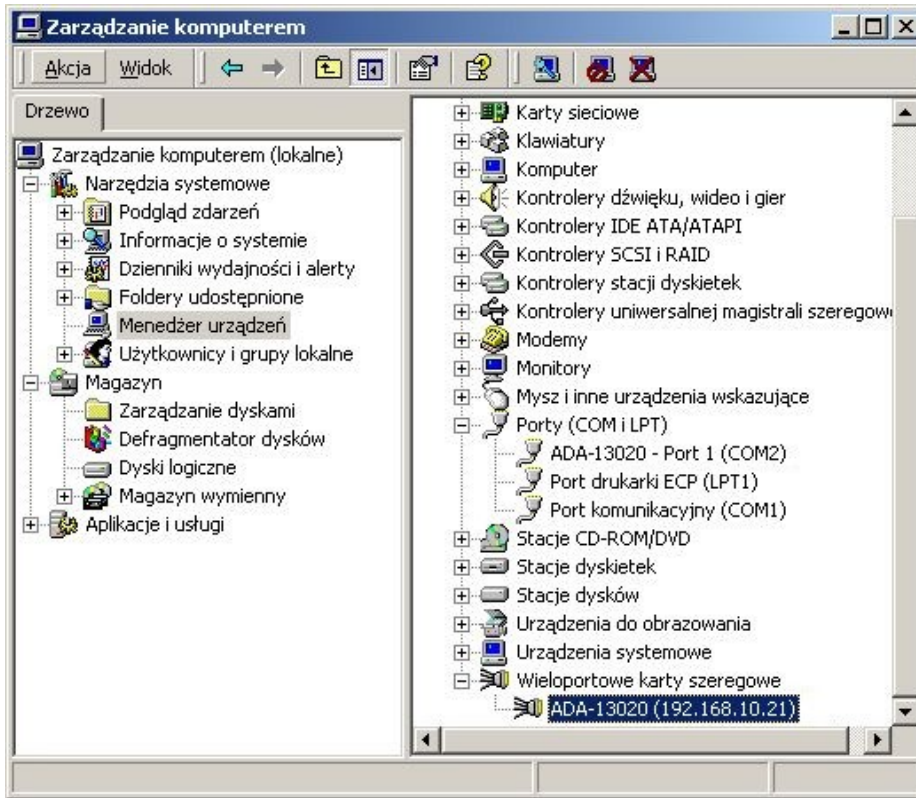


Fig. 29. Devices view on Windows XP

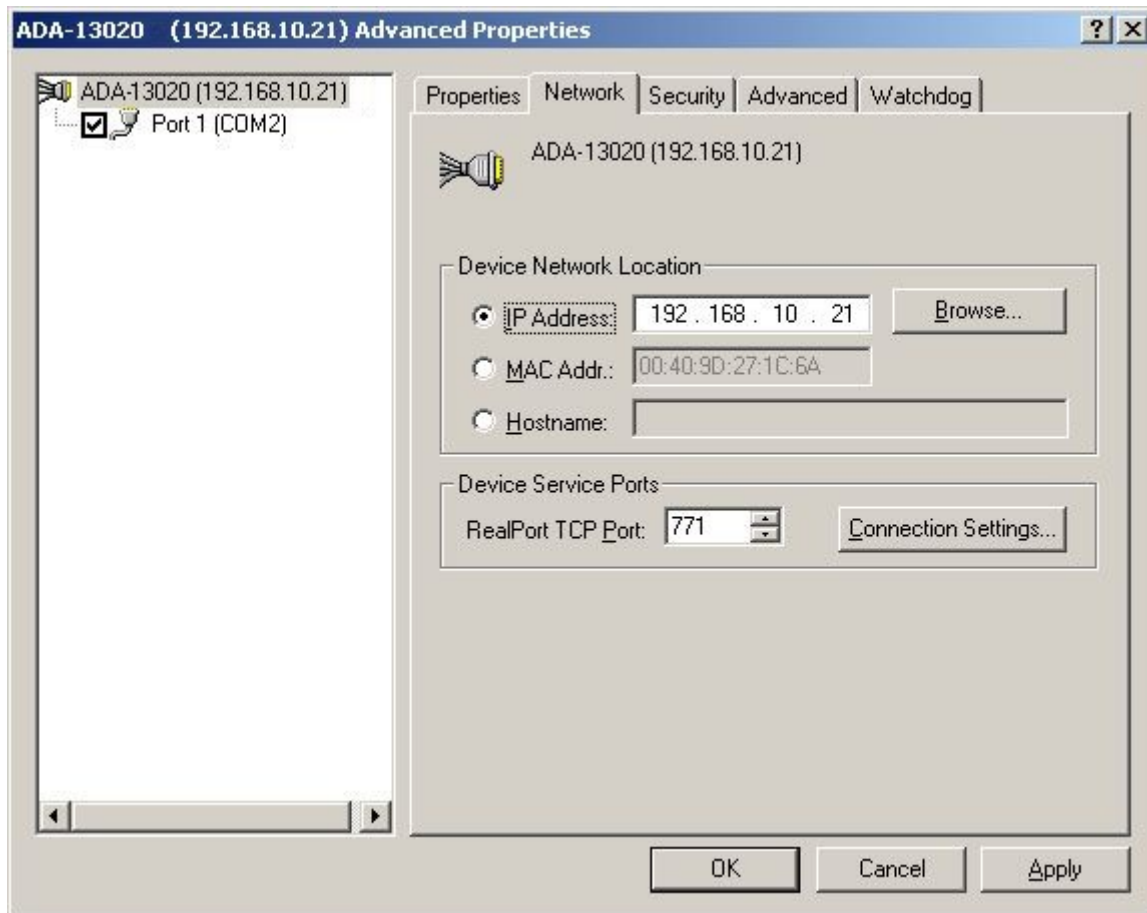


Fig. 30. Example configuration of multi-port serial adapter

**7. FACTORY DEFAULT**

<i>Parameter</i>	<i>Value</i>
User name	root
Password	dbps
Operating mode	RealPort
Bout rate[bits/sec]	9600
Number of data bits	8
Parity Control	no
Number of stop bits	1
Flow Control	no

**8. PROBLEMS**

<i>Problem</i>	<i>Solution</i>
I forgot the password	Restoring Default Settings according to steps below: 1. Disconnect the power of the converter, 2. Remove the cover of ETHERNET connector, 3. Press RESET "RST" and holding the button, connect the power of the converter, 4. Release the button after 20 sec. when the converter will start with default settings. Restoring Default Settings deletes existing configuration and the proper configuration should be loaded to the converter form the backup.
I changed the configuration and the converter isn't functioning.	1. Enter in the Internet browser <a href="http://converter-ip-address">http://converter-ip-address</a> , 2. Select the menu <b>[Factory Default Settings]</b> press <b>[Restore]</b> .

**9. VERSIONS**

	ADA-13021 -	<input type="checkbox"/>	-	<input type="checkbox"/>	-	<input type="checkbox"/>	-	<input type="checkbox"/>
<b>Electronics version:</b>	Standard			1				
<b>Current Loop Voltage:</b>	24VDC					1		
	12VDC (standard)					2		
<b>Current Loop Current:</b>	0 – 20 mA (standard)							1
	0 – 30 mA							2
<b>Galvanic isolation:</b>	1kV= 3-way							2
	3kV= 3-way							3

Order example:

Product symbol: **ADA-13021-1-2-1-2**

- 1** – standard electronics version,
- 2** – current loop voltage 12VDC,
- 1** – current loop current 0-20mA,
- 2** – galvanic isolation 1kV=,

10. SPECIFICATION

<b>TECHNICAL DATA</b>		
<b>Transmission Parameters</b>		
<b>Net/ Interface</b>	<b>ETHERNET</b>	<b>Current Loop</b>
<b>Connector</b>	RJ45	Screw terminal, wire max. Ø 2,5mm <sup>2</sup> .
<b>Max. Line length</b>	LAN up to 150 m	Depend on baud rate, up to few kilometres
<b>Max. baud rate</b>	10/100 Mbit/s	Do 38,4 kbps (depend on current loop line length)
<b>Transmission line</b>	4-pair twisted cable, UTP 4x2x0,5 (24AWG), shield inside large interferences STP 4x2x0,5 (24AWG)).	2-pair twisted cable eg UTP Nx2x0,5 (24AWG), shield inside large interferences eg STP Nx2x0,5 (24AWG).
<b>Standards</b>	IEEE 802.3	current signal, 0-20mA (TTY)
<b>Transmission type</b>	Current Loop asynchronous half duplex or full duplex	
<b>Optical Signalization</b>	<ul style="list-style-type: none"> <li>• PWR – green LED power supply,</li> <li>• RX - red LED data receiving from Current Loop side,</li> <li>• TX - yellow LED data transmission through Current Loop interface.</li> </ul>	
<b>Electrical Parameters</b>		
<b>Power requirements</b>	10 - 24 – 30 V DC	
<b>Power Cable</b>	Recommended length – up to 3m	
<b>Power</b>	3W	
<b>Protection from reverse power polarization</b>	yes	
<b>Galvanic Isolation</b>	1kV= or 3kV= (between power circuit and ETHERNET signal line) 1kV= or 3kV= (between power circuit and Current Loop signal line)	
<b>Optoisolation</b>	~3kV= (between signal lines Current Loop and ETHERNET)	
<b>Electromagnetic compatibility</b>	Resistance to disruptions PN-EN 55024. Emission of disruptions PN-EN 55022.	
<b>Safety requiring</b>	According to the PN-EN60950 norm.	
<b>Environment</b>	Commercial and light industrial.	
<b>Environmental Parameters</b>		
<b>Operating temperature</b>	-30 ÷ 60°C	
<b>Humidity</b>	5 ÷ 95% - non-condensing	
<b>Storage temperature</b>	-40 ÷ 70°C	
<b>Casing</b>		
<b>Dimensions</b>	53mm x 90mm x 62mm	
<b>Material</b>	PC/ABS	
<b>Degree of casing protection</b>	IP40	
<b>Degree of terminal protection</b>	IP20	
<b>Weight</b>	0,10 kg	
<b>According to standards</b>	DIN EN50022, DIN EN43880	
<b>Location during work</b>	Free	
<b>Mounting method</b>	On the rail compliant with DIN35 / TS35 standard.	





**Dear Customer,**

Thank you for purchasing **CEL-MAR Company** products.

We hope that this user manual helped connect and start up the **ADA-13021 converter**. We also wish to inform you that we are a manufacturer of the widest selections of data communications products in the world such as: data transmission converters with interface RS232, RS485, RS422, USB, Current Loop, Fibre-Optic Converters and Ethernet or Wi-Fi.

Please contact us to tell how you like our products and how we can satisfy you present and future expectation.

**CEL-MAR sp.j.**

Zakład Informatyki i Elektroniki  
Scięgiennego 219C str.  
25-116 Kielce, POLAND

Tel.....: +48 41 362-12-46  
Tel/fax.....: +48 41 361-07-70  
Web.....: <http://www.cel-mar.pl/en>  
Office.....: [office@cel-mar.pl](mailto:office@cel-mar.pl)  
Sales department.....: [handlowy@cel-mar.pl](mailto:handlowy@cel-mar.pl)  
Technical information .....: [support@cel-mar.pl](mailto:support@cel-mar.pl)