

# User manual

## ADA-I9141

### USB to RS-485 / RS-422 converter (without galvanic isolation)



## Contents

1. GENERAL INFORMATION.....	3
1.1. WARRANTED INFORMATION.....	3
1.2. GENERAL CONDITIONS FOR SAFE USE.....	3
1.3. CE LABEL.....	3
1.4. ENVIRONMENTAL PRESERVATION.....	3
1.5. SERVICE AND MAINTENANCE.....	3
1.6. PACK CONTENTS.....	3
2. PRODUCT INFORMATION.....	3
2.1. PROPERTIES.....	3
2.2. DESCRIPTION.....	4
2.3. SUPPORTED OPERATING SYSTEMS.....	4
3. CONFIGURATION.....	4
4. INSTALLATION.....	4
4.1. CONNECTION TO RS485/RS422 BUS.....	5
4.1.1. CONNECTION TO RS422 OR RS485 (4W) BUS 4-WIRE.....	5
4.1.2. CONNECTION TO RS485 2-WIRE BUS.....	5
4.2. LINE TERMINATION.....	6
4.3. CONNECTION TO USB INTERFACE OF PC.....	6
4.4. POWER SUPPLY.....	6
5. DRIVERS INSTALLATION IN SYSTEM WINDOWS.....	6
5.1. EXAMPLE DRIVER INSTALLATION IN WINDOWS 7 SYSTEM.....	6
6. DRIVER UNINSTALLATION.....	12
6.1. DRIVER UNINSTALLATION IN WINDOWS 98/ME SYSTEMS.....	12
6.2. DRIVER UNINSTALLATION IN WINDOWS 2000/XP/2003/VISTA/7/2008 SYSTEMS.....	12
6.2.1. EXAMPLE DRIVER UNINSTALLATION IN WINDOWS 7 SYSTEMS.....	12
6.3. EMERGENCY DRIVER UNINSTALLATION.....	13
6.3.1. EMERGENCY DRIVER UNINSTALLATION IN WINDOWS 98/ME/2000.....	13
6.3.2. EMERGENCY DRIVER UNINSTALLATION IN WINDOWS XP/2003/Vista/7/2008.....	13
7. USING.....	14
7.1. BAUD RATE SELECTION FOR PROFIBUS COM PORT.....	14
7.2. SELECTION OF COM PORT LARGER THAN COM9.....	14
8. SPECIFICATION.....	14

## 1. GENERAL INFORMATION

Thank you for your purchase of **CEL-MAR Company** product. This product has been completely tested and is covered by a two year warranty on parts and operation from date of sale.

If any questions or problems arise during installation or use of this product, please do not hesitate to contact Technical Support at +48 41 362-12-46 or e-mail [support@cel-mar.pl](mailto:support@cel-mar.pl).

### 1.1. WARRANTED INFORMATION

**ADA-I9141** converter is covered by a two year warranty from date of sale. In case of being damaged it will be repair or the damaged component will be replace. The warranty does not cover damage caused from improper use, materials consumption or any unauthorized changes. If the product does not function (is damaged), or not operate in accordance with the instructions, will be repaired.

All warranty and no warranty repairs must be returned with paid transport and insuring to the **CEL-MAR Company**.

**CEL-MAR Company** under no circumstances won't be responsible for ensuing damage from improper using the product or as a result of random causes: the lightning discharge, the flood, the fire and the like.

**CEL-MAR Company** is not be held responsible for damages and loss including: loss of profits, loss of data, pecuniary losses ensuing from using or the impossibility of using this product.

In specific cases **CEL-MAR Company** discontinue all warranties and in particular do not follow the user manual and do not accept terms of warranty by the user.

### 1.2. GENERAL CONDITIONS FOR SAFE USE

The device should be installed in a safe and stable places (eg, electroinstallation cabinet), the powering cable should be arranged so as not to be exposed to trampling, attaching, or pulling out of the circuit.

Do not put device on the wet surface.

Do not connect devices for nondescript powering sources,

Do not damage or crush powering wires.

Do not make connection with wet hands.

Do not adapt, open or make holes in casings of the device!

Do not immerse device in water or no other liquid.

Do not put the fire opened on device sources: candles, an oil lamps and the like.

Complete disable from the supply network is only after disconnecting the power supply circuit voltage.

Do not carry out the assembly or disassembly of the device if it is enabled. This may result to short circuit and damage the device.

The device can not be used for applications that determine human life and health (eg. Medical).

### 1.3. CE LABEL



The CE symbol on the device CEL-MAR means compatibility with electromagnetic compatibility Electromagnetic Compatibility Directive **EMC 2014/30/WE**.

Declaration of Conformity is delivered with purchased converter.

### 1.4. ENVIRONMENTAL PRESERVATION



This sign on the device inform about putting expended device with other waste materials. Device should send to the recycling. (In accordance with the act about the Electronic Appliance Expended from day 29 of July 2005)

### 1.5. SERVICE AND MAINTENANCE

The **ADA-I9141 converter** does not require the servicing and maintenance.

Technical support is available at number +48 41 362-12-46 in 8.00-16.00, from Monday to Friday or e-mail [support@cel-mar.pl](mailto:support@cel-mar.pl).

### 1.6. PACK CONTENTS

ADA-I9141 converter, user manual, CE declaration, CD-ROM with USB drivers software.

## 2. PRODUCT INFORMATION

### 2.1. PROPERTIES

- Conversion of USB to RS485/422 standard,
- Compatibility with USB1.1 and USB 2.0 standard,
- Virtual Serial Port,
- Transmitted signals: RX, TX,
- Operate on the Bus: RS485 two-wire and four-wire in point-to-point mode or multi-point, RS422 in point-to-point mode,
- STANDARD Baud rate (bps): 300, 600, 1200, 2400, 4800, 9600, 19200, 38400, 57600, 115200, 230400, 460800, 921600,
- PROFIBUS baud rate ( bps): 300 bps, 600 bps, 1200 bps, 2400 bps, 4800 bps, 9600 bps, 19200 bps, **93750**(230400) bps, **187500**(460800) bps, **500000**(921600) bps, **1500000**(14400) bps.
- Transparent for all protocols: MODBUS, DNP, PROFIBUS and other,
- Any format of byte defined with the specification of RS232 interface,
- Power supply from the USB port,
- Interface casing,
- RS-485/RS-422 interface connection via screw terminal block – max.Ø 1mm<sup>2</sup>,
- USB interface connection via Mail USB connector A-type or USB cable with A-type connector,
- Casing dimensions (W x D x H) 55 mm x 30 mm x 24,5 mm.

## 2.2. DESCRIPTION

**ADA-I9141 converts** USB to RS-485/RS-422 standard without interference of data format and it is automatically detect by PC system after connecting to USB network (Plug&Play device). ADA-I9141 uses data transmission lines Rx, Tx & GND (signal ground) for communication with other RS485/422 devices.

This converter doesn't require external power supply (it is powered from USB bus) and it uses asynchronous baud rate up to 921,3 kbps (drivers for STANDARD baud rate) / 1500000 bps (drivers for PROFIBUS baud rate).

A-type USB Mail plug (or USB cable with A-type connector) enables simple connection to computer and on other side simple connection the RS485/422 Bus provide plug-in screw terminal block.

Together with the ADA-I9141 we provide the drivers, which after installation, create additional COM port in operating system (Windows 98, ME, NT, 2000, XP, 2003, Vista, 7, 2008, 8, 8.1, 10) on the next free number e.g. COM3. It can be use as standard COM port but it isn't hardware port but virtual, create in Windows system. This is the reason why some applications running in DOS and use this port, can operate improperly.

## 2.3. SUPPORTED OPERATING SYSTEMS

For ADA-I9141 converter, are available serial virtual ports drivers for operation systems:

-Windows: 98, ME, NT, 2000, XP, Vista, 7, 2008, 8, 8.1, 10; Windows CE,

-Windows Server: 2003, 2008 R2, 2012 R2, 2016,

-Linux: from Ubuntu 11.10, kernel 3.0.0-19 drivers implemented in system kernel,

-Raspbian - Raspberry Pi,

-Mac: OS X 10.3 to 10.8, OS X 10.9 and other.

## 3. CONFIGURATION

ADA-I9141 converter can be configured for operating in RS485 or RS422 by the use MODE switch (fig.1). Description of setting is shown in the table below.

Switch MODE	Description
<b>RS485</b>	Operating in RS485 standard on 2 and 4-wire bus in point-to-point or multi-point topology. RS485 transmitter enable only during data transmission
<b>RS422</b>	Operating in RS422 standard on 4-wire bus in point-to-point. RS422 transmitter continuously enable.

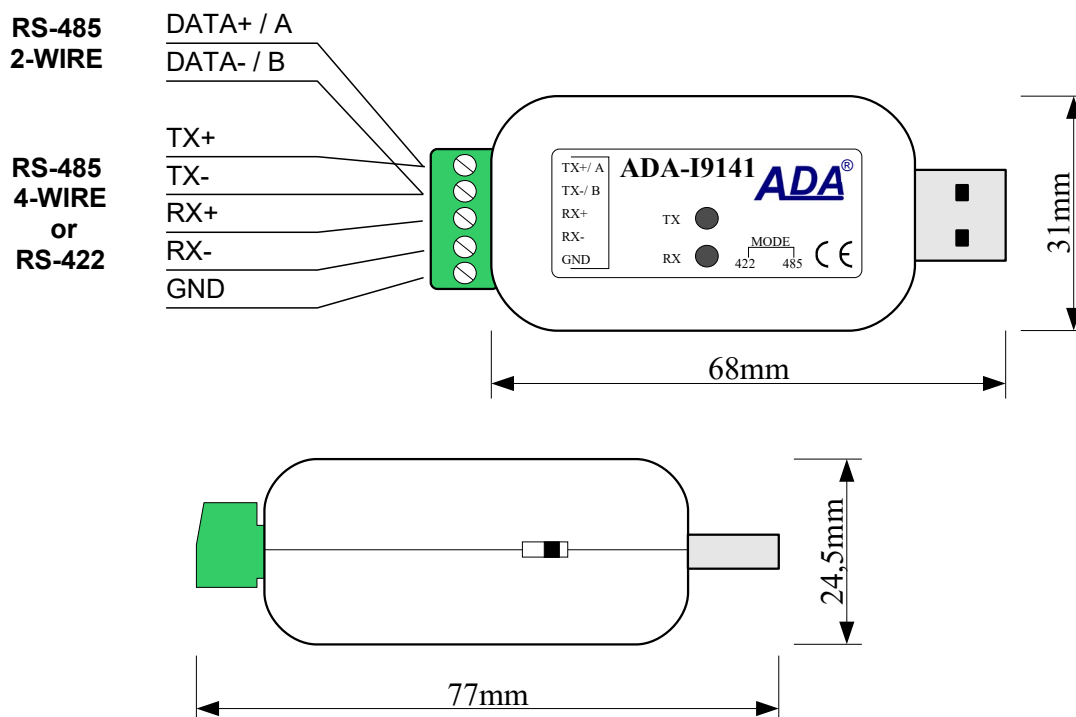


Fig 1. ADA-I9141 view

## 4. INSTALLATION

This chapter will show you correctly connection of the ADA-I9141 to RS-485/RS-422 Bus. To compensate the ground potential of devices operating on RS485/RS422 Bus you should connect the grounds of RS485/RS422 interfaces to the converter terminals GND. This connection should be done individually for each systems if standard wiring of RS485/RS422 bus not provide correct transmission.

In the purpose of disruptions minimization of influence from environment you should :

- use shielded twisted-pair cable in the system, of which it is possible to connect the shield to ground on one end of cable,
- lay the signals cable in the distance no short than with 25 cm from power cable.

## 4.1. CONNECTION TO RS485/RS422 BUS

RS485/RS422 interface of ADA-I9141 converter is available on screw terminal block described as: Tx+/A, Tx-/B, Rx+, Rx-, GND. ADA-I9141 can operate on RS422 bus or RS485 bus - both bus need suitable wiring.

### 4.1.1. CONNECTION TO RS422 OR RS485 (4W) BUS 4-WIRE

Examples connection of ADA-I9141 to RS422 4-wire bus or RS485(4W) in point-to-point and multi-point topology are shown below.

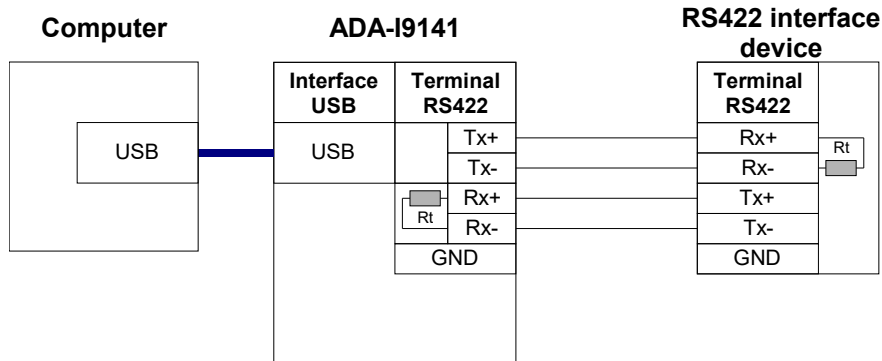


Fig 2. Example connection of RS422 or RS485(4W) interface devices in Point-to-Point topology to ADA-I9141 converter; Tx, Rx signals

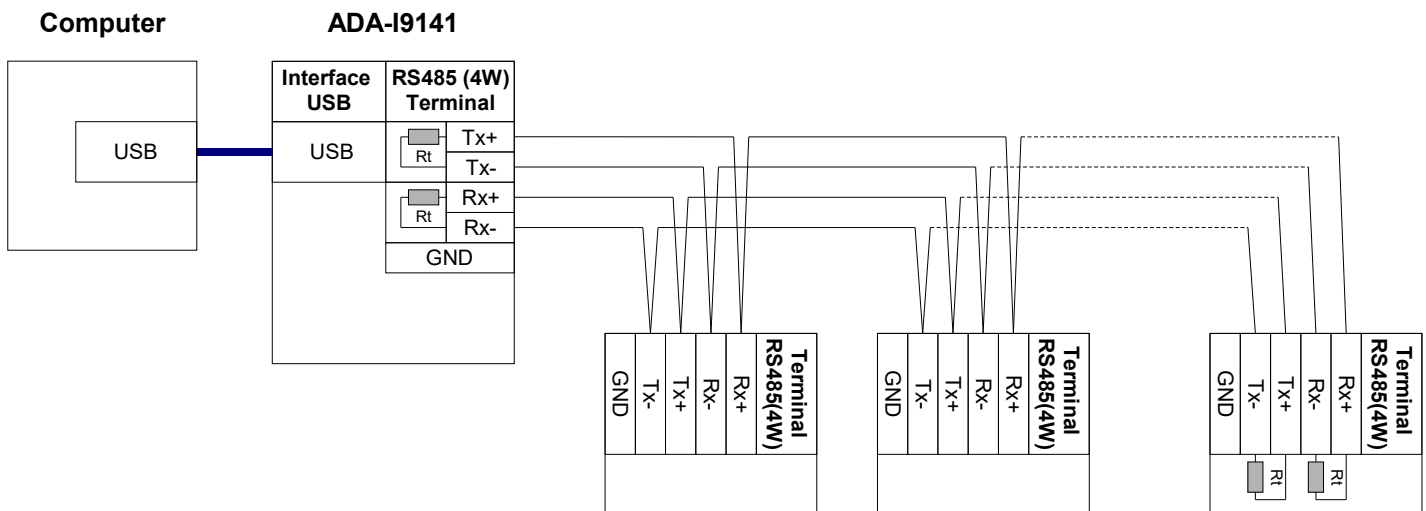


Fig 3. Example of connection RS485(4W) interface devices to ADA-I9141 converter

### 4.1.2. CONNECTION TO RS485 2-WIRE BUS

Most of RS485 interface devices use two-wire bus for data transmission. You should check the setting of ADA-I9141 to operate on RS485 2-wire bus before connecting to 2-wire network – MODE switch should be set on RS485, then connect the bus wires to terminal TX+, TX- as shown below.

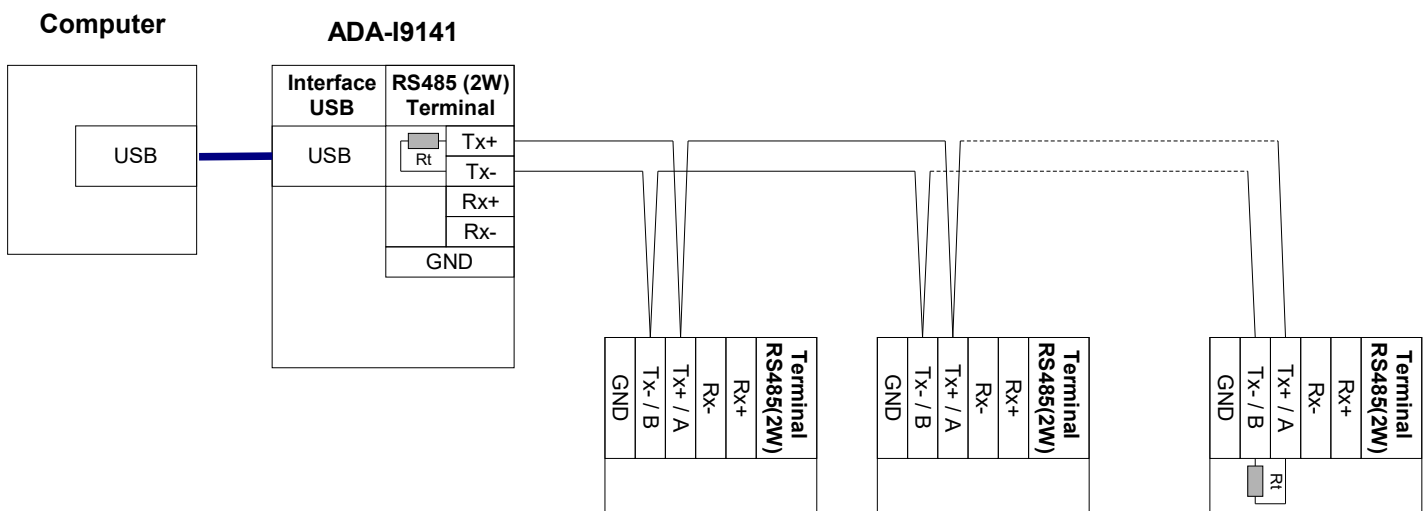


Fig 4. Connection example of RS485(2W) interface devices to ADA-I9141 converter

## 4.2. LINE TERMINATION

The application of Line Termination (terminator)  $R_t = 120 \text{ ohms}$  will reduce electrical reflection in data line at high baud rate. It is not needed below 9600Bd. You should use the Line Termination resistor if the distance is over 1000m @ 9600Bd or 700m @ 19200Bd transmission. The Line Termination (terminators) connect to RS485/422 screw terminal block of ADA-I9141 by the use of screwdriver. Example connection of  $R_t$  are shown on Fig. 2, 3, 4. Resistor  $R_t = 120 \Omega$ .

## 4.3. CONNECTION TO USB INTERFACE OF PC

Converter is equipped with USB A-type connector for easily connection to computer by the use USB cable Aplug-Asocketed.

## 4.4. POWER SUPPLY

ADA-I9141 converter is fed from USB port of PC.

## 5. DRIVERS INSTALLATION IN SYSTEM WINDOWS

Converter ADA-I9141 is purchased with the driver package Installer for Windows systems on CD-ROM.

For installation follow the steps below:

- a/ insert the CD-ROM to optical driver of the computer,
- b/ the installation wizard will run automatically, if not double click **ADAUSBDRV.exe**.
- c/ following the steps of installation wizard, will be installed the Drivers and Uninstaller for the Windows systems 98, ME, 2000, XP, 2003, Vista, Win7, 2008,
- d/ connect the convert to USB port of computer and follow the steps of installation wizard.

### 5.1. EXAMPLE DRIVER INSTALLATION IN WINDOWS 7 SYSTEM


Together With ADA-I9141 converter is delivered CD-ROM with drivers for the baud rates:

**a/ Standard**


**b/ Profibus**

Driver installation have to be done from the account with Administrator permissions. For the drivers installation follow the steps bellow:


- a/ insert the CD-ROM to optical driver of computer,
  - b/ the installation wizard will run automatically, if not double click **ADAUSBDRV.exe** form the CD-ROM.
- After running the installer, the wizard installation window will appear.

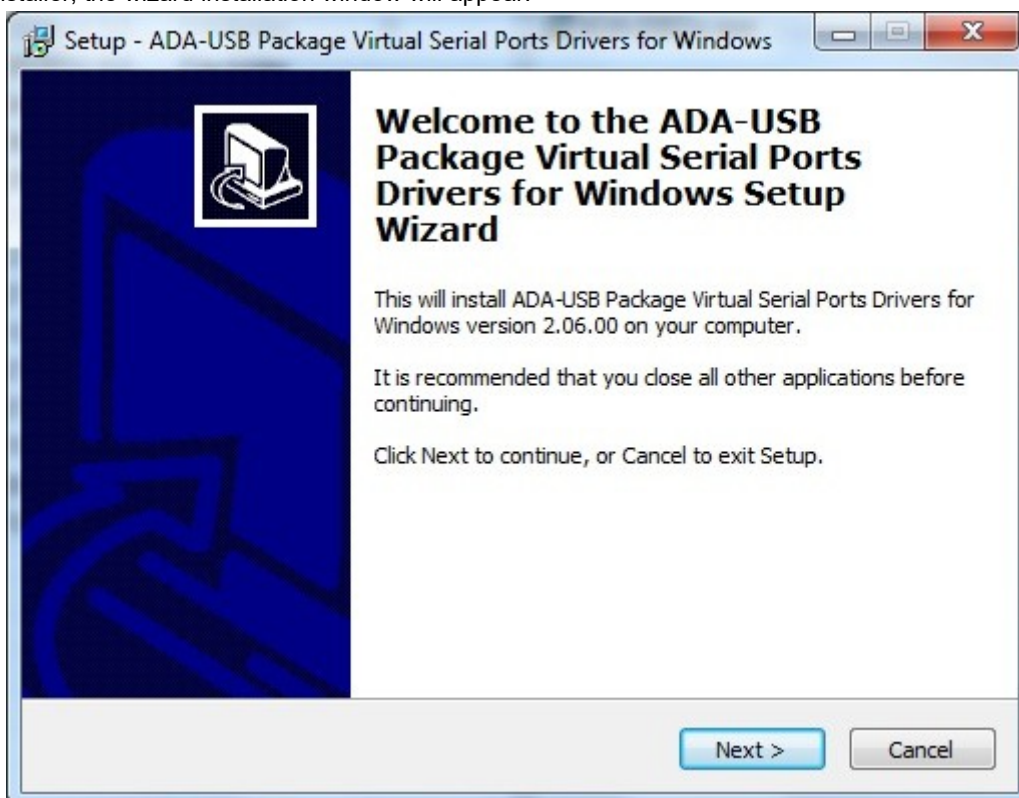


Press [Next]

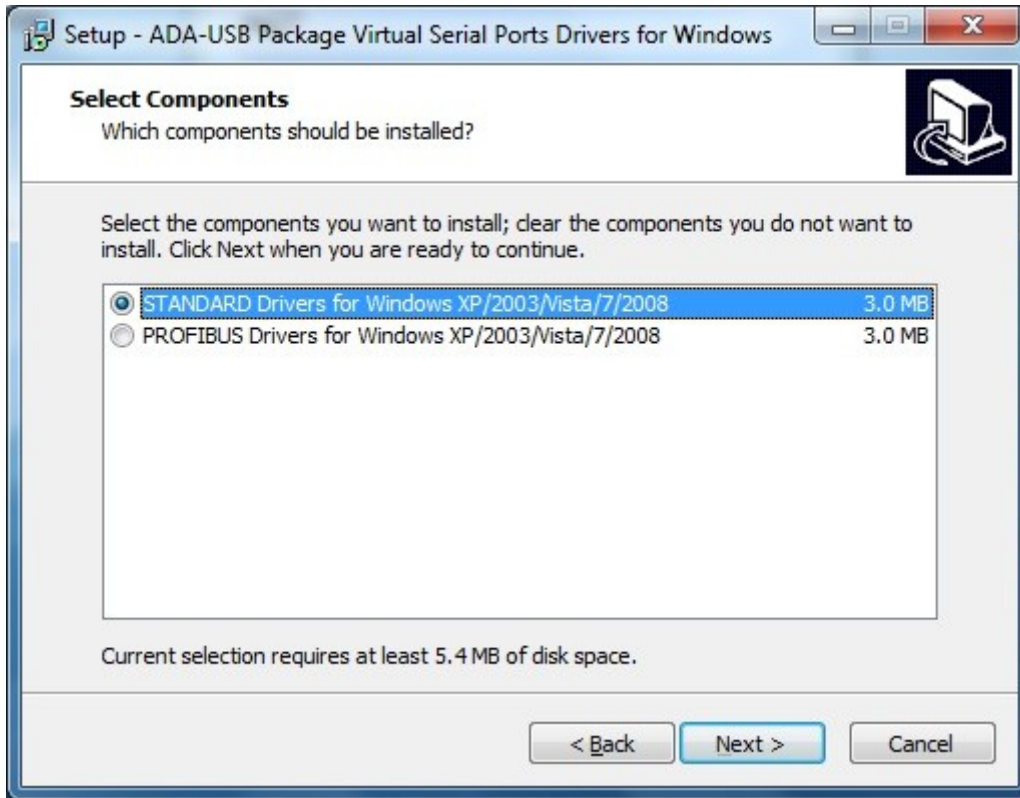


Select STANDARD Drivers and press [Next]

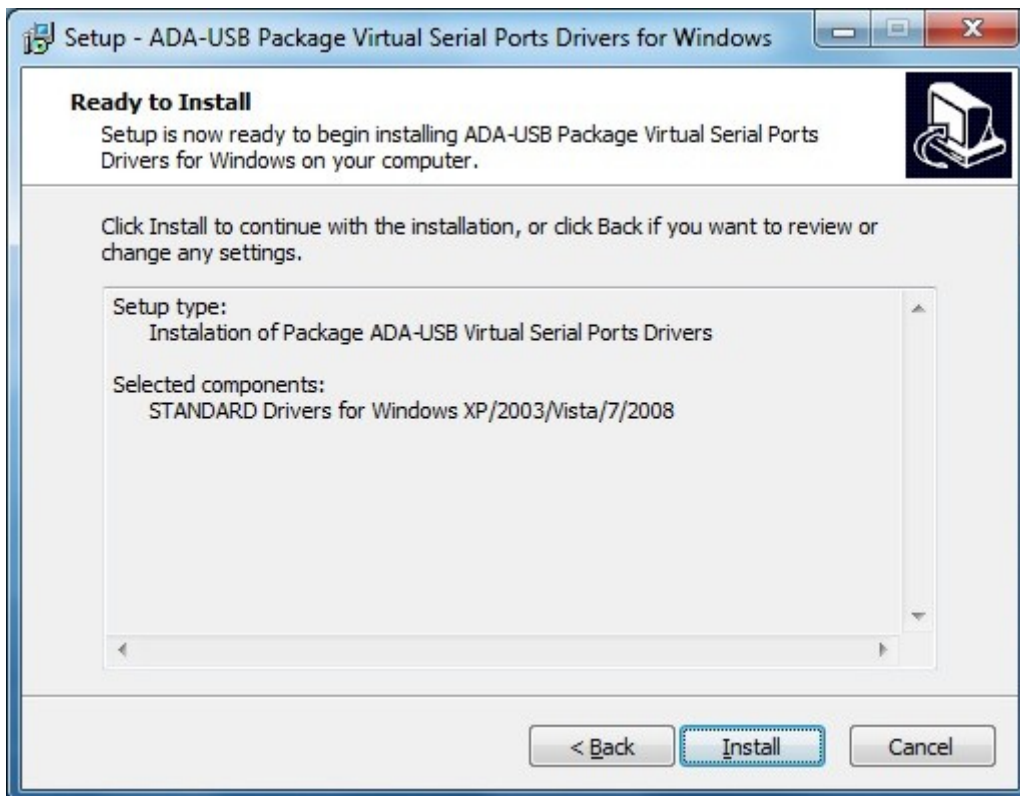


Press [Install]

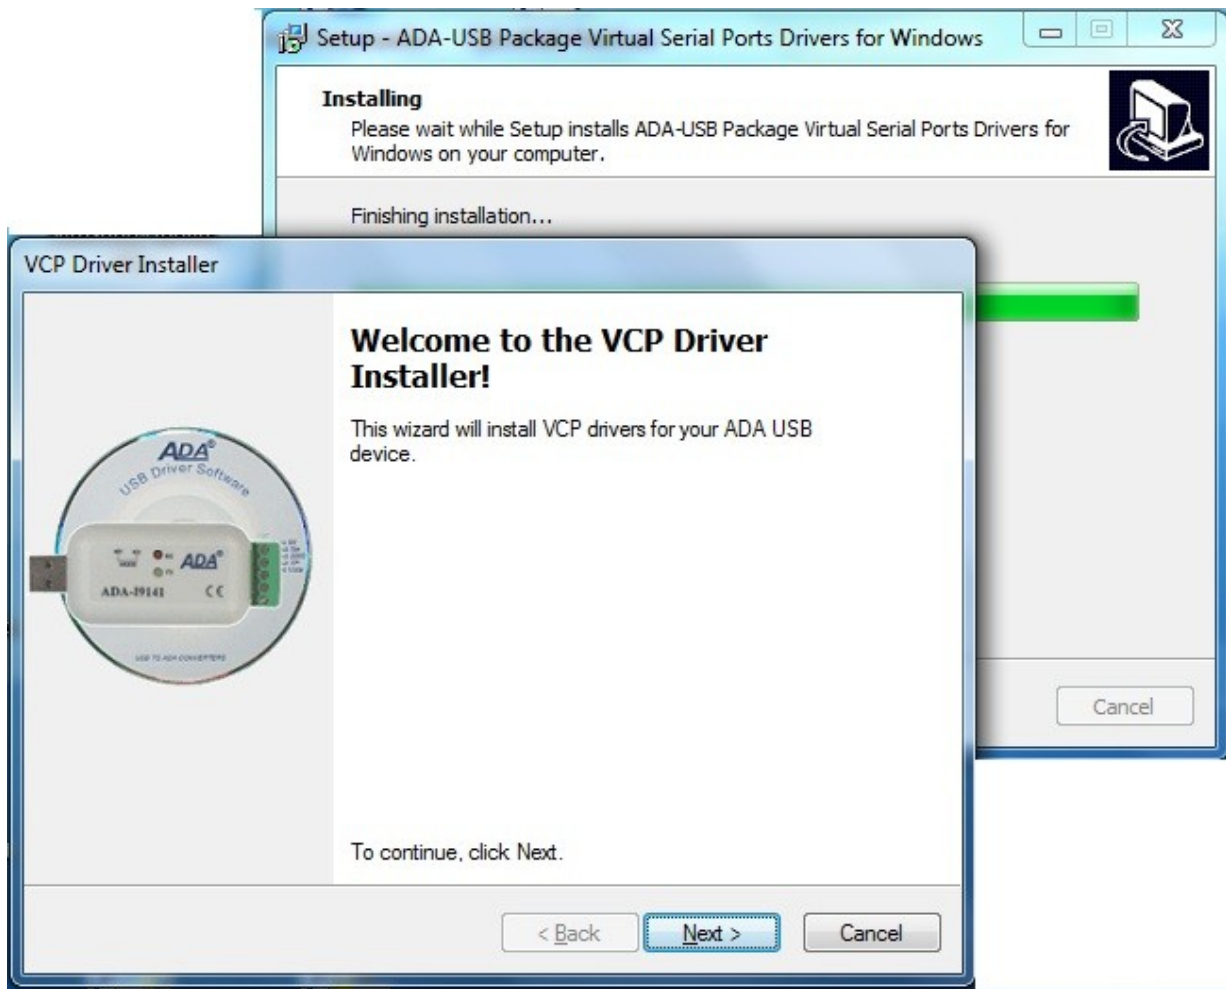


Press [Next], will be installed Drivers for USB Bus.

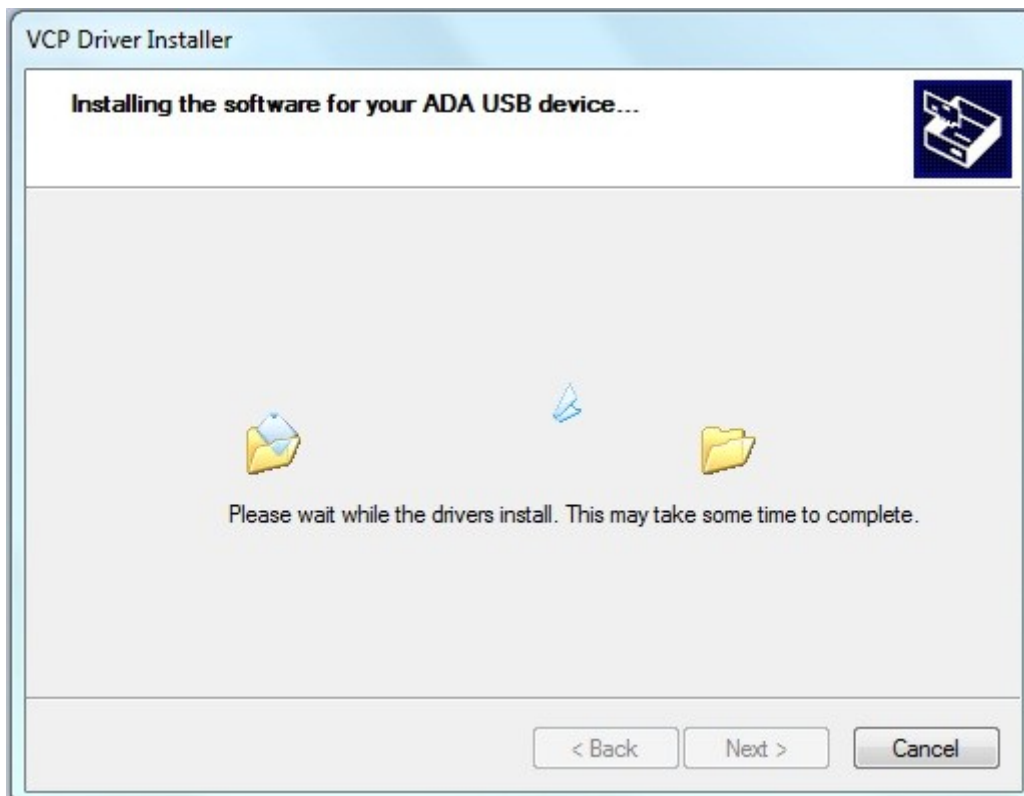




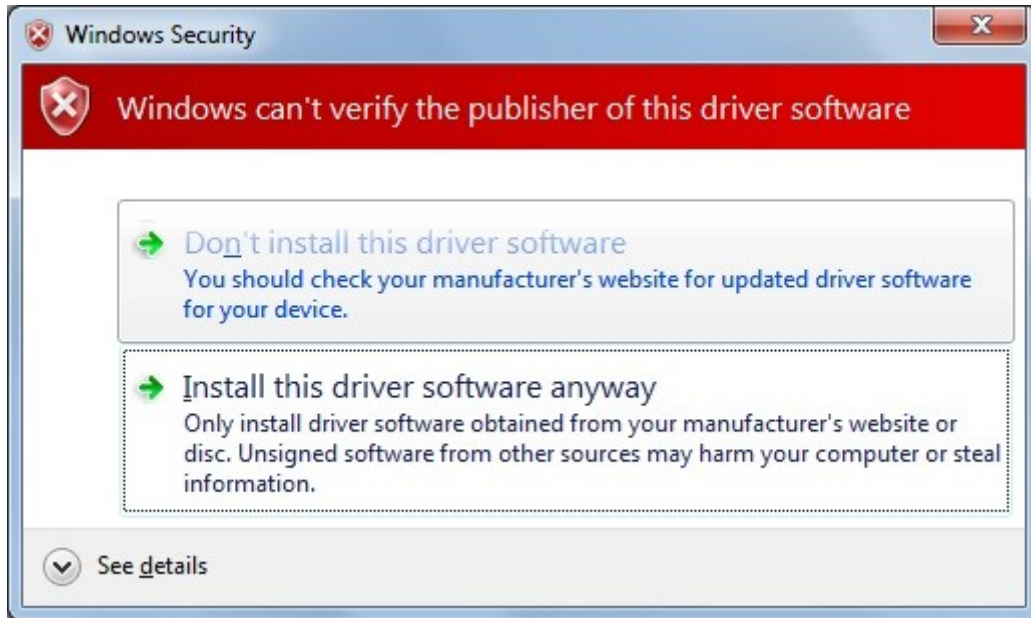

Press [Install this driver software anyway]. Installation of drivers for USB Bus will start.

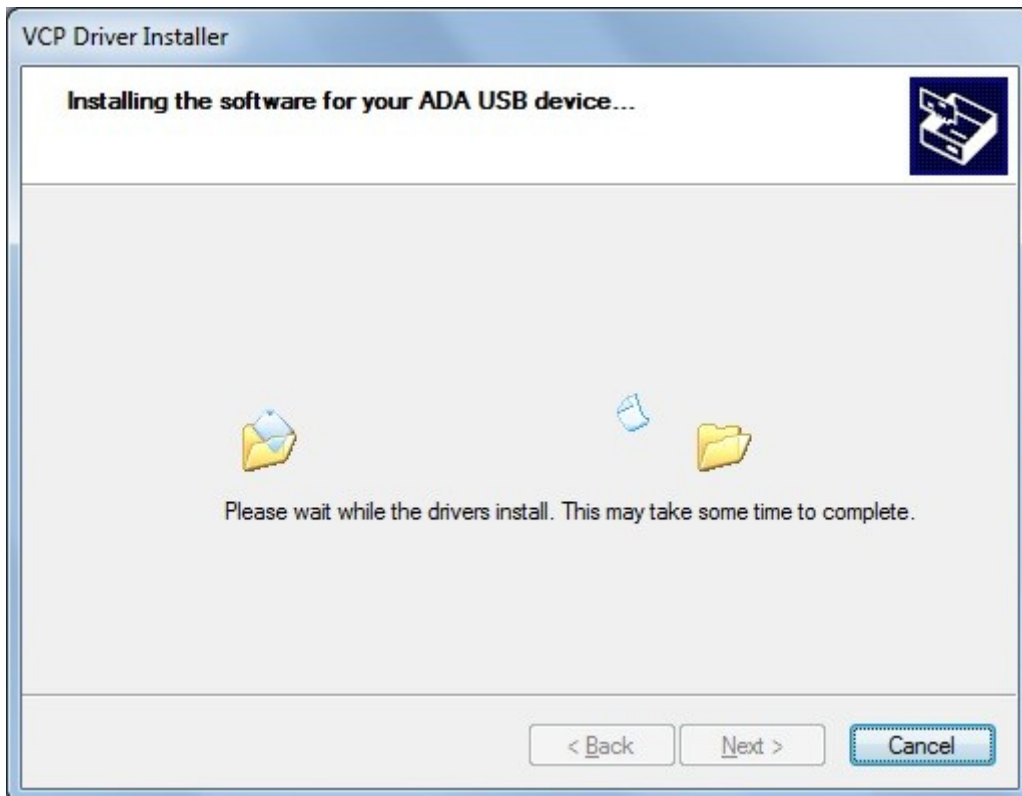


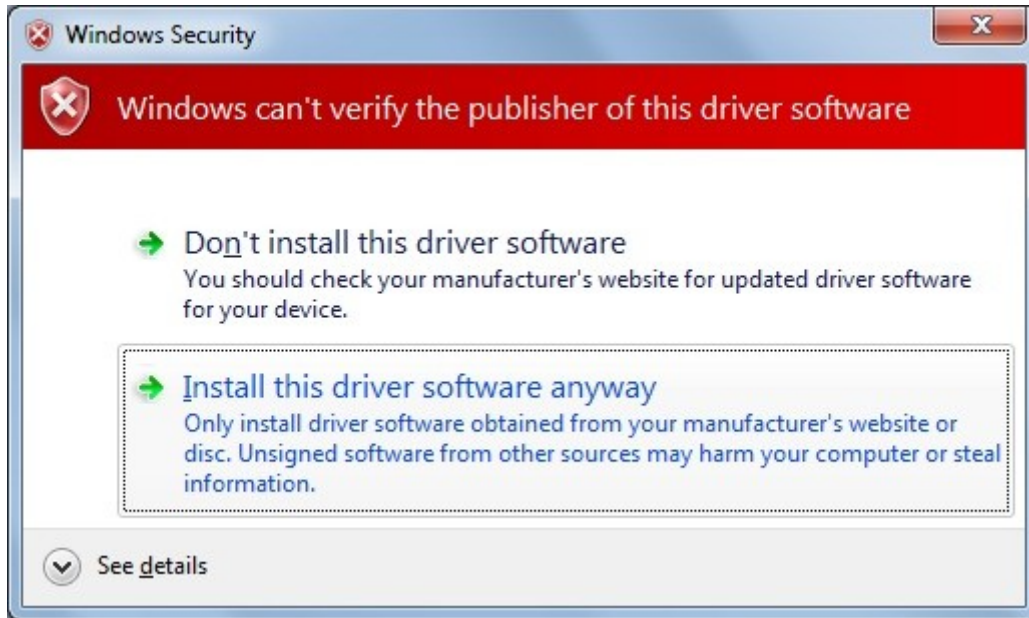

Press [Install this driver software anyway]. Installation of drivers for Virtual Port will start.



Press [Finish]

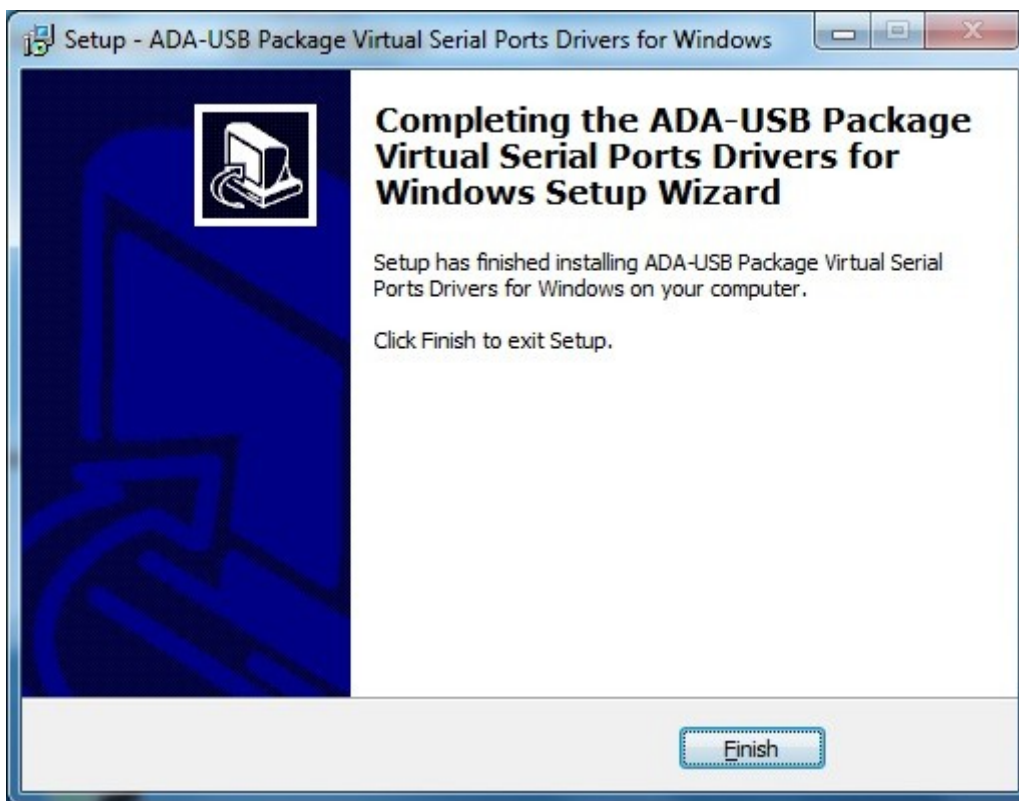


Press [Finish].


The driver for ADA-I9141 have been installed. This can be checked in "Uninstall or change a program".



Now you can connect ADA-I9141 to computer port.

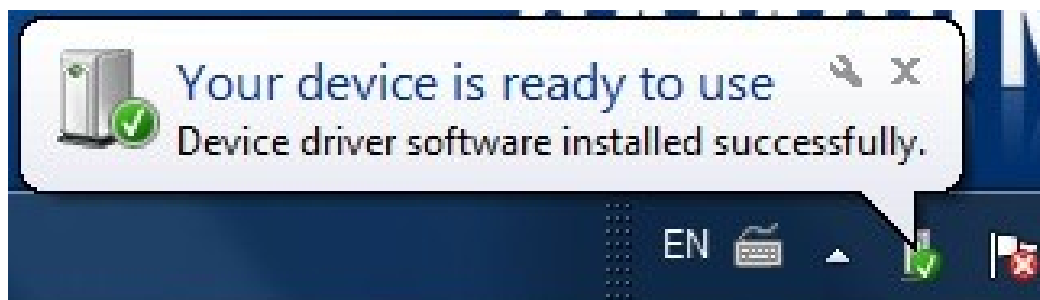

After connection will appear the Tool tip with [Your device is ready to use]. To see the details press the Tooltip, and will appear information window where you can see which COM port was assigned to converter.

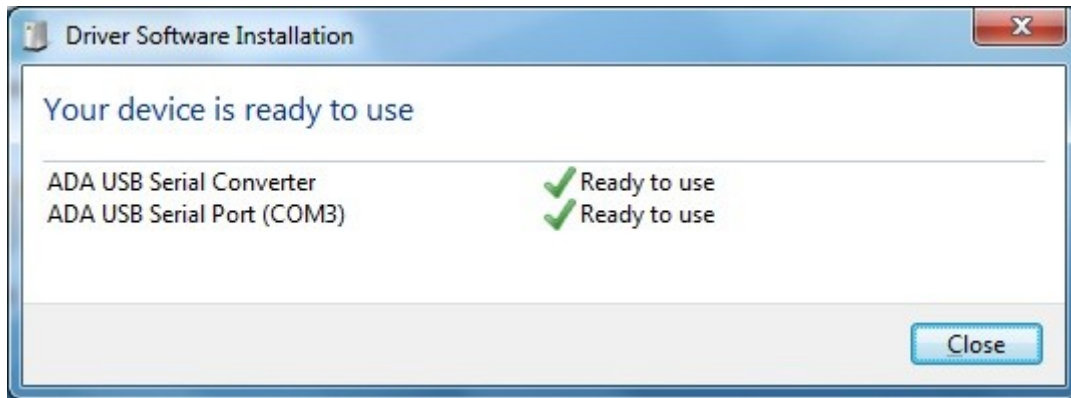

After this installation, RS485/422 port of ADA-I9141 converter is available in the system as normal COM port. You have to remember about specified baud rate for communication.

If during installation you selected driver for Standard baud rates you would be able to use:

300 bps, 600 bps, 1200 bps, 2400 bps, 4800 bps, 9600 bps, 19200 bps, 38400 bps, 57600 bps, 115200 bps, 230400 bps, 460800 bps, 921600 bps.

If during installation you selected driver for Profibus baud rates you would be able to use:

300 bps, 600 bps, 1200 bps, 2400 bps, 4800 bps, **9600** bps, **19200** bps, **93750** bps ( if you select 230400 bps), **187500** bps (if you select 460800bps ), **500000** bps ( if you select 921600 bps ), **1500000** bps (if you select 14400 bps).

## 6. DRIVER UNINSTALLATION

### 6.1. DRIVER UNINSTALLATION IN WINDOWS 98/ME SYSTEMS

In this system driver uninstallation have to be done according follow steps:

- a/ disconnect converter from computer,
- b/ select menu **Start > Setting > Control Panel > Add > Remove Programs**,
- c/ select from the list **"ADA USB Serial Converter Driver"** and press **[Change / Remove]**,
- e/ reboot the computer.

### 6.2. DRIVER UNINSTALLATION IN WINDOWS 2000/XP/2003/VISTA/7/2008 SYSTEMS


In this system driver uninstallation have to be done according follow steps:

- a/ disconnect converter from computer,
- b/ login as the **Administrator**,
- c/ select menu **Start > Setting > Control Panel > Add > Remove Programs**,
- d/ select from the list **Windows Driver Package – CEL-MAR ADA – Virtual USB Serial Port**,
- e/ press **[Change / Remove]**, Virtual USB Serial Port driver will be uninstalled,
- f/ select from the list **Windows Driver Package – CEL-MAR ADA – USB Serial Converter**,
- g/ press **[Change / Remove]**, driver converter of USB Bus will be uninstalled,
- h/ after uninstallation reboot the computer.


#### 6.2.1. EXAMPLE DRIVER UNINSTALLATION IN WINDOWS 7 SYSTEMS

Windows 7 system driver uninstallation have to be done according follow steps:

- a/ disconnect converter from computer,
- b/ login the **Administrator account**,
- c/ select menu **Start > Control Panel > Programs > Uninstall**,
- d/ select from **Windows Driver Package – CEL-MAR ADA – Virtual USB Serial Port**,
- e/ press **[Uninstall/Change]**, Virtual USB Serial Port driver will be uninstalled

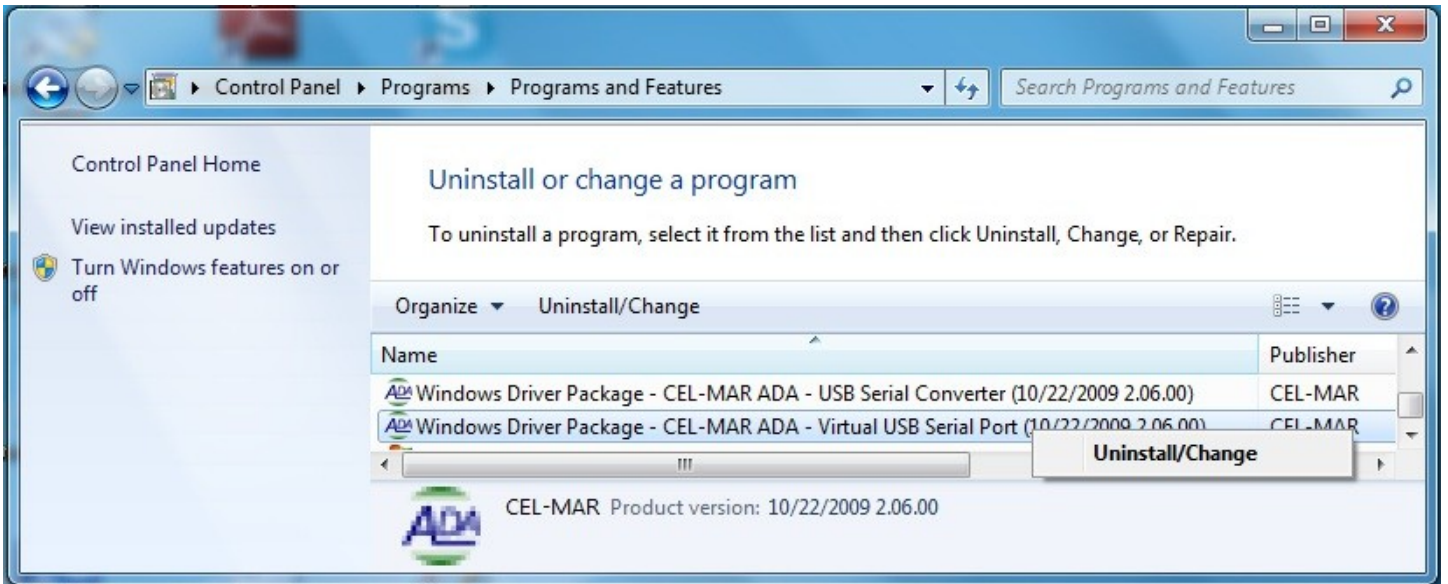

f/ select from the list **Windows Driver Package – CEL-MAR ADA – USB Serial Converter**

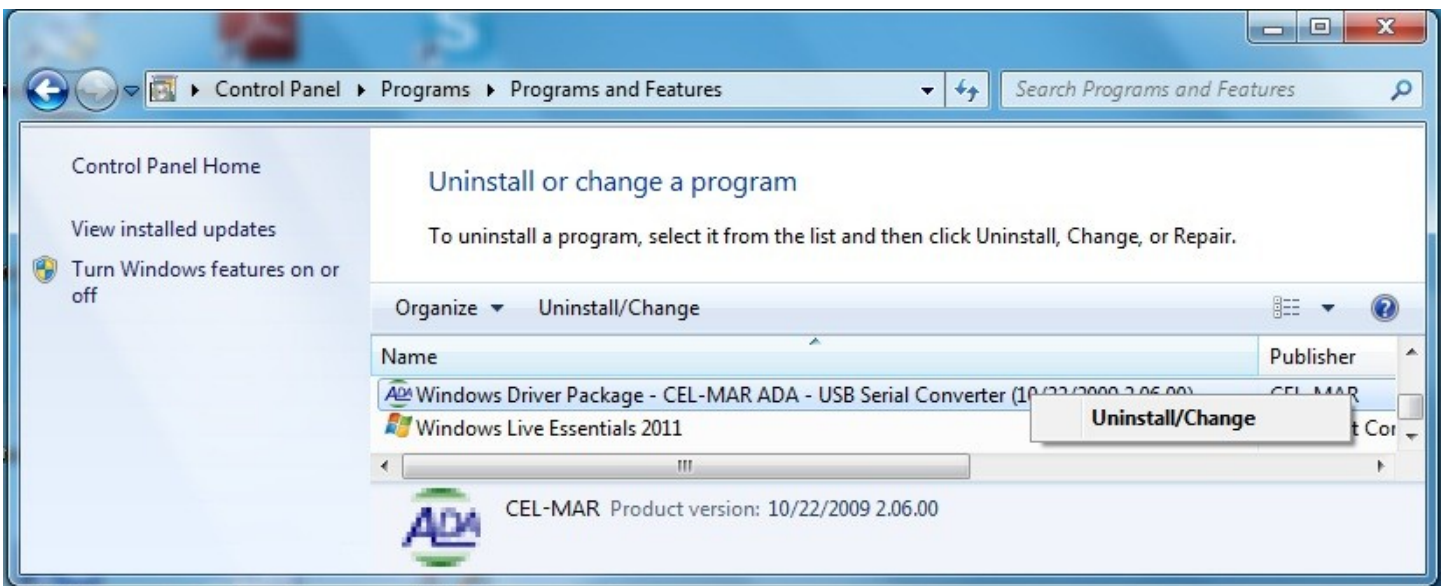

g/ press [**Uninstall/Change**], driver converter of USB Bus will be uninstalled,  
h/ after uninstallation reboot the computer.

### 6.3. EMERGENCY DRIVER UNINSTALLATION

If there are problems with correct operation of drivers or converter and on computer was installed driver other devices this type, you can use special software form delivered CD-ROM to clean the system form files and entries in the system registry. This can be done after uninstallation described in point 6.1 and 6.2.

#### 6.3.1. EMERGENCY DRIVER UNINSTALLATION IN WINDOWS 98/ME/2000

Emergency driver uninstallation in Windows 98/ME/2000 system have to be done according follow steps:

- a/ disconnect converter from computer,
- b/ from CD-ROM delivered with converter, copy to hard disk the folder **Windows\Win-98ME\_1.09.06\FTClean** for Windows 98/ME or **Windows\Win-2000\FTClean** for Windows 2000,
- c/ from FTClean folder run the application **FTClean.exe** and follow the Tooltip,
- d/ after finishing, reboot the computer.

#### 6.3.2. EMERGENCY DRIVER UNINSTALLATION IN WINDOWS XP/2003/Vista/7/2008

Emergency driver uninstallation in Windows XP/2003/Vista/7/2008 system have to be done according follow steps:

- a/ disconnect converter from computer,
- b/ login the **Administrator account**,
- c/ from CD-ROM delivered with converter, copy to hard disk the folder **Windows\Win-XP-2003-Vista-7-2008\_2.06\CDMUninstaller**,
- d/ from CDMUninstaller folder run the application **uninstall.bat**,
- e/ after finishing, reboot the computer.

## 7. USING

After property connection according to section above you can start using the converter. During data transmission LEDs should blink and they indicate appropriately:

<i>LED</i>	<i>Description</i>
Rx (yellow)	data reception via ADA-I9141 converter from RS485/RS422 port.
Tx (red)	data transmission from ADA-I9141 converter via RS485/RS422 port.

### 7.1. BAUD RATE SELECTION FOR PROFIBUS COM PORT

For setting correct Profibus baud rate (after installation "Virtual Port" driver for Profibus) in application using virtual port COM follow table below.

Set baud rate [bps]	Actual baud rate [bps] Profibus
230400	<b>937500</b>
460800	<b>187500</b>
921600	<b>500000</b>
14400	<b>1500000</b>

### 7.2. SELECTION OF COM PORT LARGER THAN COM9

If virtual port COM of converter will install in Windows OS as COM10 or larger then in application using this port you should type COM port address as: \\.\COM10.

## 8. SPECIFICATION

<b>TECHNICAL DATA</b>		
<b>Transmission Parameters</b>		
<b>Interface</b>	<b>USB</b>	<b>RS-485/422</b>
<b>Connector</b>	A-type Mail	Screw terminal block, max. wire Ø 1mm <sup>2</sup>
<b>Line length</b>	up to 5m	1200 m (depend on baud rate)
<b>Max. number of connected devices</b>	1	32 / 2
<b>Transmission line</b>	USB cable with socked A-type	Twisted cable 1-pair, 2- pair or 4-pair, UTP Cat.5e, shield inside large interferences STP Cat. 5e.
<b>Maximum baud rate</b>	do 921,6 kbps (Standard) / do 1500 kbps (Profibus)	
<b>Transmission type</b>	Asynchronous, half duplex or full duplex,	
<b>Standards</b>	EIA-485, CCITT V.11, USB1.1, USB2.0	
<b>Optical Signalization</b>	<ul style="list-style-type: none"> <li>• RX red LED data reception on RS485/422 port,</li> <li>• TX yellow LED data transmission on RS485/422 port,</li> </ul>	
<b>Electrical Parameters</b>		
<b>Power requirements</b>	from USB of Computer	
<b>Power Cable</b>	USB cable	
<b>Power</b>	< 0,5W	
<b>Protection from reverse power polarization</b>	Not applicable	
<b>Galvanic Isolation</b>	No	
<b>Optoisolation</b>	No	
<b>Electromagnetic compatibility</b>	Resistance to disruptions according to the standard PN-EN 55024. Emission of disruptions according to the standard PN-EN 55022.	
<b>Safety requiring</b>	According to the PN-EN60950 norm.	
<b>Environment</b>	Commercial and light industrial.	
<b>Environmental Parameters</b>		
<b>Operating temperature</b>	0 ÷ 50°C	
<b>Humidity</b>	5 ÷ 95% - non-condensing	
<b>Storage temperature</b>	-20 ÷ 70°C	
<b>Casing</b>		

<b>Dimensions (W x D x H)</b>	55mm x 30mm x 24,5mm
<b>Material</b>	ABS
<b>Degree of casing protection</b>	IP30
<b>Weight</b>	< 0,10 kg
<b>Implementation of Standard</b>	Not applicable
<b>Location during work</b>	Free
<b>Mounting method</b>	Not applicable

**Dear Customer,**

Thank you for purchasing **CEL-MAR Company** product.

We hope that the **ADA-I9141 converter** and this user manual help simplify your network of 1-Wire sensor for industrial applications. We also wish to remind you that CEL-MAR Company are a manufacturer of the widest selections of data communications products in the world in applications such as: data transmission converters in RS232, RS485, RS422, USB, Current Loop, Fibre-Optic and Ethernet Converters and many others.

We welcome your feedback so please contact us to tell how you like our products and how we can satisfy you present and future needs.

**CEL-MAR sp.j.**  
Zakład Informatyki i Elektroniki  
str. Ściegiennego 219C  
25-116 Kielce, POLSKA

Tel.....: +48 41 362-12-46  
Tel/fax.....: +48 41 361-07-70  
Web.....: <http://www.cel-mar.pl/en>  
Office.....: [office@cel-mar.pl](mailto:office@cel-mar.pl)  
Sales department.....: [sales@cel-mar.pl](mailto:sales@cel-mar.pl)  
Technical information .....: [support@cel-mar.pl](mailto:support@cel-mar.pl)